



Organic Peroxide For Polymer & Rubber Elastomers & Thermoplastics



SHANDONG DO SENDER CHEMICALS CO.,LTD.

Website: <https://www.perodox.com/>

Email: nick@dosenderchem.com.cn

Mobile: +86 15166012761

Address: No. 66, Zhongrun Avenue, Zhangdian District, Zibo City, Shandong Province, China.



01

DO SENDER CHEM

We are a professional enterprise that researches, develops, produces, and sells organic peroxide initiators, curing agents, catalysts, and vulcanizing agents. The company has a sound product quality assurance system, advanced production technology, and complete analytical and experimental instruments. With advanced technology, efficient management, and trustworthy products, it sells well throughout the country and is exported worldwide.

For years, we have been providing the Organic Peroxides to the global. High quality products cannot be separated from a high-quality safety management system. Our production facilities are designed by a team of top domestic chemical design institutes, which keep up with the international first-class level in terms of safety properties and process flow. At the same time, our R&D team is constantly communicating with top universities and research institutes at home and abroad.



The process technology of organic peroxide series products has been operating safely for many years. This production technology is mature, reliable, advanced, with high product quality and low production pollution. It is currently widely used in relevant domestic enterprises. This project has a high level of automation and machinery, and the equipment is well sealed. It adopts a DCS automation control system for centralized control.

For hazardous chemicals that constitute major hazard sources and key monitored hazardous chemical processes, an SIS safety instrument system is also installed to centrally detect, display, interlock, control, and alarm during the production process of the device. The construction unit has many years of production experience in this product, ensuring the safety and reliability of the entire process.


We Create Valuable Passions

Together, we bring essential solutions for a sustainable future

We are a global, specialty chemicals leader. Markets and consumers worldwide rely on our essential solutions to manufacture everyday products, such as cleaning goods, paints and coatings and building products. Furthermore, the dedication of approximately 500 employees with a shared commitment to our customers, business growth, safety, sustainability and innovation has resulted in a consistently strong financial performance. Within our Polymer Specialties business, we produce everyday essentials for the global polymer, recycling and polymer processing industries. We are among the world's leading producers of organic peroxides, metal alkyls and organometallic specialties, which are essential ingredients for the thermoplastic, composite and rubber industries.

Global Service Network

Although our manufacturing facilities are based on the mainland of China, Our strong resource integration capability enables us to provide more reliable, sustainable, and reliable services in the current international situation. For the supply chain, every node is crucial, and it is also the key to ensuring the safety and high-quality reliability of our products. All of our factories have passed ISO9001 certifications to ensure the highest product quality and strict compliance with environmental regulations. In addition, we continue to increase investment in manufacturing technology, high-quality standards, safety, innovation, effective technical support, and reliable supply chains.

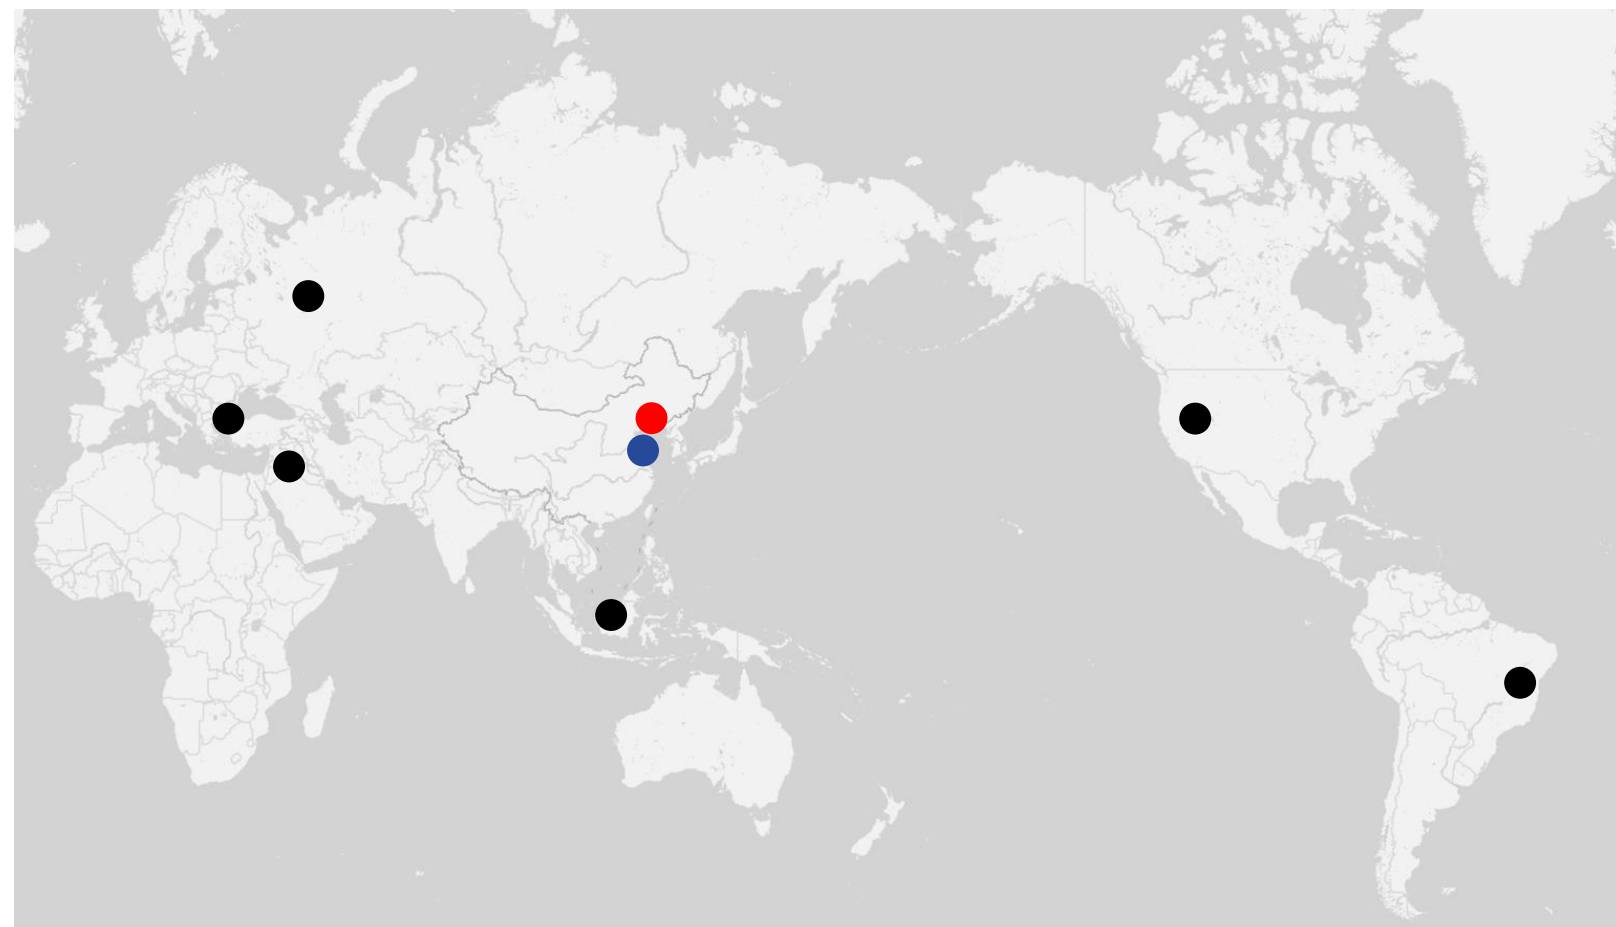

● Headquarter ● Branch ● Manufacturing Facility

Lead to a Sustainable Future

We partner with our customers, suppliers and employees to deliver innovative solutions, drive progress and create a safe and sustainable today and tomorrow for everyone.


Our Commitment to a Sustainable Future, is based on following pillars:

 <p>CONTINUOUSLY IMPROVE our safety and environmental performance</p>	 <p>ENGAGE AND PARTNER with employees, customers, suppliers, and society to drive sustainable progress</p>	 <p>GROW AND INNOVATE to create sustainable solutions enabling customers to be more sustainable</p>
 <p>ON PROTRACT WAR It must go through three stages: strategic defense, strategic stalemate, and strategic counterattack</p>	 <p>ON CONTRADICTION Contradiction exists in the process of the development of all things and runs through the entire process of their development</p>	 <p>ON PRACTICE To achieve a concrete historical unity of subjectivity and objectivity, theory and practice, knowledge and action</p>


02



We are one of the companies in China that produces and operates the largest variety of organic peroxide products, with the largest trade volume and the best product quality. The company has the production capacity for 30 types of organic peroxide products, while other Class 5.2 products can be sold and exported. A strong supply chain and high-quality service provide the possibility for this. Our current factory facility has an annual production capacity of approximately 10,000 tons of organic peroxides, which is superior to other Chinese suppliers

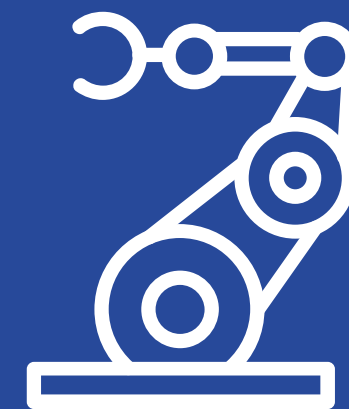

Productivity
10000 T/A

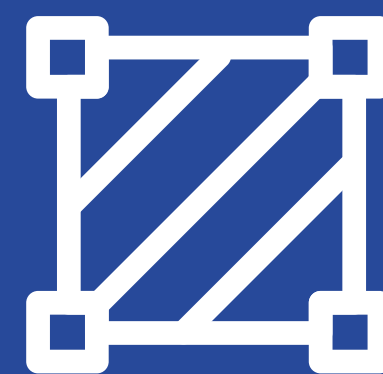

Factory Cover Area
2000 m²



Investment
20M



Product Quantity
50+

03



Range of Crosslinking Peroxides

Do Sender Chem's range of organic peroxides for the crosslinking of elastomers and thermoplastics is very extensive. Companies all over the world depend on our **Perodox®** organic peroxide brands. Why? Because they are an important ingredient in the production of products, ranging from hi-tech automotive parts such as hoses and belts to shoe soles and power distribution cables.



- Examples include:
- Perodox® 101
PEX pipes, polymer modification, technical rubber goods
 - Perodox® B
Polymerization of acrylate and methacrylate
Perodox® 14
wire 8 cable, technical rubber goods, footwear
 - Perodox® K
Polymer production and Poly(meth)acrylics
 - Perodox® L
initiator used for curing unsaturated polyester, vinyl ester and acrylic thermoset
 - Perodox® LUNA
initiator for the suspension and mass polymerization of vinyl chloride



Much of our success is due to our philosophy of creating close partnerships with our customers. What do you want to achieve? From optimizing applications, improving efficiencies, resolving difficulties or even developing new crosslinking peroxides, we're happy to meet with you to discuss your requirements.

This product guide provides an overview of our main, commercially available crosslinking peroxides. We invite you to visit us at www.perodox.com for complete product listings.

Uses of Crosslinking Peroxides

Peroxides are used to crosslink

NR: Natural rubber

IR: Polyisoprene

BR: Polybutadiene

CR: Polychloroprene

SBR: Styrene butadiene rubber

NBR: Nitrile rubber

HNBR: Hydrogenated nitrile rubber

Q: Silicone

AU/EU: Polyurethane

EPM: Ethylene propylene copolymer

EPDM: Ethylene propylene terpolymer

POE: Polyolefin elastomer

T: Polysulfide

PE: Polyethylene

CM: Chlorinated polyethylene

CSM: Chlorosulfonated polyethylene

EVA: Ethylene vinylacetate copolymer

ABS: Acrylonitrile butadiene styrene copolymer

AEM: Ethylene acrylic

EBA: Ethylene butylacrylate copolymer

FKM: Fluoro elastomers

and blends of

NBR/EPDM

SBR/EPDM

PP/EPDM (TPV's)

PE/EVA

NBR/EVA

POE/EP(D)M

Organic peroxides also find growing use in Polymer modification (CR-PP) Recycling Grafting processes (silane, maleic anhydride) Dynamic vulcanization (TPV production)

Peroxides find limited use or cannot be used to crosslink

ACM: Polyacrylate

IIR: Butyl rubber

CIIR: Chlorobutyl rubber

CO: Epichlorohydrin

ECO: Epichlorohydrin copolymer

PP: Polypropylene

PB: Polybutene-1

PIB: Polyisobutene

PVC: Polyvinylchloride



04



Your Safety is our Priority

In general, organic peroxides are thermally unstable components which can decompose at relatively low temperatures. However, knowledge of proper handling techniques, carefully designed facilities and thorough training of personnel can overcome the hazards. Personnel who understand and pay proper attention will be better able to handle organic peroxides confidently and safely.

UN numbers

All products accepted for transport are assigned to generic entry numbers according to classification principles as described in the recommendations by the United Nations Committee of Experts on the Transport of Dangerous Goods. An explanation of all relevant UN numbers is given in Table 1.

Storage temperatures

SADT: Self-Accelerating Decomposition Temperature

The SADT is the lowest temperature at which self-accelerating decomposition may occur with a substance in the packaging as used in transport. Transportation temperatures are derived from the SADT according to the recommendations by the United Nations Committee of Experts on the Transport of Dangerous Goods.

T_s max.

The T_s max. given in the product list on pages 8-10 is the recommended maximum storage temperature at which the product is stable and quality loss will be minimal.

T_s min.

A minimum storage temperature (T_s min.) is given if phase separation, crystallization or solidification of the product is known to occur below the temperature indicated. We recommend that you store the product above the T_s min. indicated for quality and in some cases safety reasons.

T_{em} : Emergency temperature


The T_{em} is derived from the SADT and is the temperature at which emergency procedures must be triggered.

T_c : Control temperatures

The T_c is also derived from the SADT and is the maximum temperature at which the product can be safely transported.

Both the T_{em} and T_c are related to safety and do not relate to product quality. To maintain product quality the recommended storage temperatures (T_s min. and max.) should be observed.

Survey of thermal stability

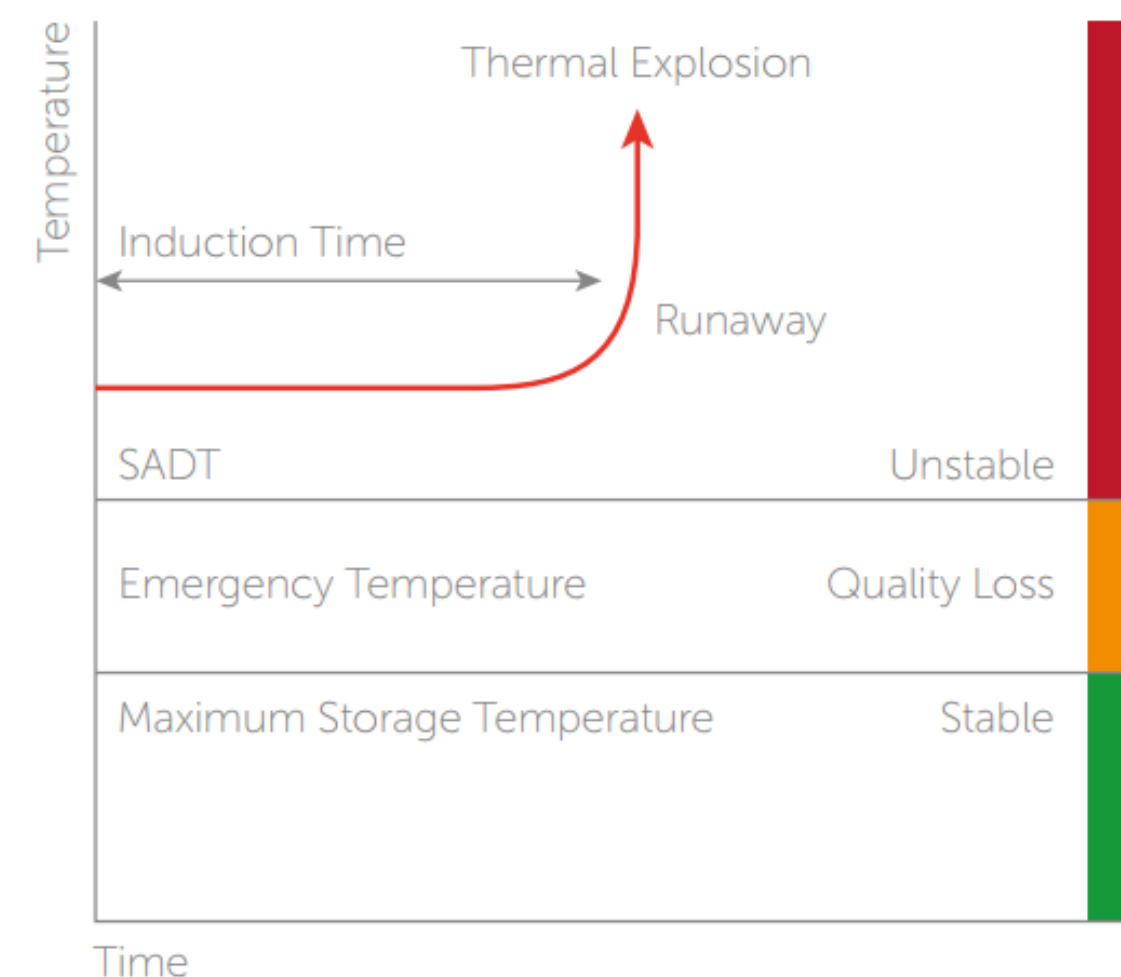

Classification of organic peroxides:

Division	UN No.	Classification	Hazard Rating
Division 5.2	3103	type C; liquid	High
Division 5.2	3104	type C; solid	High
Division 5.2	3105	type D; liquid	Medium
Division 5.2	3106	type D; liquid	Medium
Division 5.2	3107	type E; liquid	Low
Division 5.2	3108	type E; solid	Low
Division 5.2	3109	type F; liquid	Very Low
Division 5.2	3110	type F; solid	Very Low
Division 5.2	3113	type C; liquid; temperature controlled	High
Division 5.2	3114	type C; solid; temperature controlled	High

Transportation

UN number is a four-digit code used in international trade and transportation to identify dangerous goods.

It serves as the "ID number" for dangerous goods, aiming to ensure the safety of these items during transportation, storage, and handling. Developed by the United Nations Committee of Experts on the Transport of Dangerous Goods in accordance with the United Nations Recommendations on the Transport of Dangerous Goods (commonly known as the "Orange Book").

Its primary purpose is to provide a globally unified identification standard for dangerous goods and ensure transportation safety.

UN No.	Type	Largest Package Size
UN3103	Type C	Liquid 50 KG
UN3104	Type C	Solid 50 KG
UN3105	Type D	Liquid 50 KG
UN3106	Type D	Solid 50 KG
UN3107	Type E	Liquid 400 KG
UN3108	Type E	Solid 400 KG
UN3109	Type F	Liquid IBC Totes
UN3110	Type F	Solid IBC Totes
UN3113	Type C	Liquid, Temperature Controlled 50 KG
UN3114	Type C	Solid, Temperature Controlled 50 KG
UN3115	Type D	Liquid, Temperature Controlled 50 KG
UN3116	Type D	Solid, Temperature Controlled 50 KG
UN3117	Type E	Liquid, Temperature Controlled 400 KG
UN3119	Type F	Liquid, Temperature Controlled IBC Totes
UN3120	Type F	Solid, Temperature Controlled IBC Totes

Type C refers to organic peroxides that do not detonate, do not deflagrate rapidly, and are not prone to thermal explosion during packaging and transportation, but still possess potential explosiveness. When transporting this type of organic peroxide, the net weight of each package must not exceed 50kg, and it is exempt from affixing the secondary marking for explosives.

Type D refers to organic peroxides that exhibit partial initiation but do not deflagrate rapidly or exhibit violent effects; or do not detonate but can deflagrate slowly without exhibiting violent effects; or do not deflagrate but exhibit moderate effects when subjected to a heating test under closed conditions. The net weight of each package of Type D organic peroxides must not exceed 50kg

Type E refers to organic peroxides that do not detonate, deflagrate, but only exhibit weak effects during heating tests under closed conditions. The net weight of each package of Type E organic peroxides must not exceed 400kg, and the volume must not exceed 450kg

Type F refers to organic peroxides that, when subjected to a heating test under enclosed conditions, neither cause an explosion in a cavitation state nor deflagrate, but exhibit only weak effects or no effects at all, and exhibit weak explosive force or no explosive force. Type F organic peroxides can be transported in medium-sized bulk containers, portable tanks, or tank cars.

Safety

We are recognized as the global leader in organic peroxide safety. Our proven success in safely handling organic peroxides is due to our long-term commitment to developing and maintaining high safety standards. We always place safety as our top priority.

In general, organic peroxides are unstable chemical compounds, decomposing at relatively low temperatures. They can, however, be handled and stored safely if proper precautions are followed. The prevention of undesired decomposition reactions during handling and storage of organic peroxides require knowledge of the general properties of organic peroxides and the specific requirements of each individual peroxide. Personnel who understand and pay proper attention will be able to handle organic peroxides confidently and safely

This brochure gives guidelines for the safe storage of organic peroxides in their original packaging. Organic peroxide storage requires two important considerations:

- minimization of the possibility of a peroxide decomposition
- reduction of the effects of such a decomposition.

This publication includes guidelines to minimize the probability of a peroxide decomposition by limiting the heat exposure of the product and preventing contamination. Measures to reduce effects of a decomposition are also discussed.

General recommendations are given as well as specific measures for temperature-controlled products.

Beyond the scope of this brochure are the local laws and insurance regulations that must be considered in the design of storage facilities. Various countries have published directives with their local laws.

For more information on the use and the safe handling and storage of organic peroxides, please contact your Do Sender Chem account manager or regional sales office.



Fire of 5,000 kgs organic peroxide

Safety

For product inquiry and ordering information, please contact your Do Sender Chemical account manager or regional sales office.

Thermal sensitivity

Organic peroxides are thermally unstable due to the relatively weak -O-O- bond in the molecular structure. As a result of this property organic peroxides are sensitive to heat and will decompose significantly above a certain temperature. This temperature is specific to each individual peroxide.

Every packaged peroxide has a characteristic temperature at which the self-heating accelerates. This temperature is designated as the Self-Accelerating Decomposition Temperature (SADT). At or above this temperature a runaway reaction will take place. For this reason, strict temperature control and high temperature alarms are required for the storage of organic peroxides. For many peroxides refrigerated facilities will be necessary.

During decomposition heat is released and the rate of this decomposition increases with temperature. If this heat cannot be transferred to the environment due to reduced surface area from stacking or high ambient temperatures, self-heating will accelerate and lead to a violent combustion or thermal explosion.



Safety testing to determine the sensitiveness of peroxides to the effect of heat under confinement

Contamination

Contamination may accelerate the decomposition of organic peroxides. Most heavy metal compounds have an accelerating effect on decomposition.

Acids, bases and accelerators based on e.g. cobalt or copper and amines may cause decompositions to occur at temperatures significantly lower than the recommended storage temperature.

Therefore, organic peroxides must be stored separately from other chemical compounds, unless compatibility has been proven.

Burning properties

Most organic peroxides should be considered highly combustible. Once ignited many organic peroxides burn vigorously. When heated to their decomposition temperature, organic peroxides will generate vapors. Many of these vapors are flammable. Therefore, the presence of potential ignition sources must be avoided. Electrical equipment installed should be explosion-proof to avoid sparks.

Nevertheless, auto-ignition of the vapors may still occur. Consequently, fire-fighting equipment should be present in all storage rooms.

Pressure build-up

As organic peroxides produce vapors during decomposition, pressure build-up in the package occurs. To prevent excessive pressure rise inside storage rooms due to prolonged decomposition and bursting of the packages, the storage room should be provided with a pressure relief mechanism.

Storage

One can minimize the probability of a peroxide decomposition by limiting the heat exposure of the product and preventing contamination. Temperature control is the most critical control measure in preserving quality and preventing a runaway reaction

Although a number of organic peroxides can be safely stored at ambient temperature, most require some form of temperature control. The maximum temperature allowed by the regulatory agencies is the control temperature T_c .

This temperature together with the emergency temperature (T_{em} , see section Temperature control and monitoring on this page) are derived from the SADT in next table.



TYPE OF RECEPTACLE	SADT	CONTROL TEMPERATURE	EMERGENCY TEMPERATURE
Single packagings and IBCs	20°C or less over 20 to 35°C over 35°C	20°C below SADT 15°C below SADT 10°C below SADT	10°C below SADT 10°C below SADT 5°C below SADT
Portable tanks	≤ 45°C	10°C below SADT	5°C below SADT

However, for a longer shelf life, lower storage temperatures than the control temperature are generally recommended. At this recommended storage temperature (T_s), as indicated on the product label, the product will be stable and quality loss will be minimal.

As each organic peroxide has its own specific storage temperature, consult the product catalog or individual Product Data Sheet (PDS) which can be downloaded from polymerchemistry.nouryon.com.

Temperature monitoring and control

The temperature must be maintained at or below the recommended storage temperature; consult the product catalog or PDS.

Organic peroxides should be protected from direct sunlight and all other sources of heat.

Particular attention should be given to:

- windows (not recommended or should be blinded),
- heating systems (e.g. radiators, warmwater pipes, etc).

Cooled storage rooms should be provided with at least two independent temperature alarms. An alarm is recommended when the storage temperature is exceeded by 5°C. If this is the case the store should be inspected. The temperature alarm should incorporate some delay device to allow for intermittent short temperature increase which result from inspection, loading and unloading, etc. Any possibility of alarm de-activation should be countered with an automatic alarm re-activation.

Non-cooled storage rooms should be provided with an alarm set at the emergency temperature but not higher than 45°C. It is imperative that a signal from the mentioned alarm systems should not escape notice at any time including nights, weekends, etc. and that appropriately trained personnel are alerted.

There should be dual power supply for the alarm system.

Storage

Fire fighting

A deluge system of large capacity is strongly recommended to fight large fires.

A dry-powder fire extinguisher with a capacity of at least 10 kg should be located outside the storage building, near the entrance. This is used only to fight small fires of organic peroxides. After the fire has been extinguished the peroxide should be cooled to a temperature below the SADT to prevent the peroxide from re-igniting due to self heating.

Management

Smoking, open fire and all other sources of ignition must be forbidden in and near the storage rooms. Appropriate warnings should be posted in the storage area.

Unless compatibility has been proven, organic peroxides should be stored separately from other chemical compounds and, under all circumstances, away from accelerators and other reducing agents.



Use vermiculite or perlite to clean up small spillages



Small fire extinguishers in the neighborhood of peroxide stores



Store organic peroxides in their original closed packages.

Packages should be visually checked for labelling, leakage and damage, etc. at the time of delivery. If necessary the material should be repacked in suitable, clean packages. A suitable packaging material is non-pigmented polyethylene. Never use tightly closed rigid metal containers.



Space between pallets to allow maximum air circulation

Repacking, weighing, mixing, etc. should be carried out in a separate room. Clean dedicated polyethylene or stainless steel implements should be used to prevent contamination of the peroxide.

Stacking procedures should require that labels and safety information are always visible.

Pallets should be configured to allow maximum air circulation, no more than two high with a minimum clearance of 0.1 m from any wall.

Storage on racks may be applied when individual packages are stored. Different products should be stacked separately to avoid confusion.

If liquid organic peroxides are stored, an inert absorbent material, such as vermiculite or perlite, should be available in or near the store to clean up small spillages. Absorbents should be soaked with water afterwards.

Stock should be rotated following the first in, first out principle.

The doors of the storage should be marked with the peroxide label.

The storage building should be kept clean; no litter, rags, etc.

The store should be kept closed with access limited to authorised, trained personnel only.

Directives for the safe handling and storage of organic peroxides

Storage

Organic peroxides should be protected against all sources of heat, even direct sunlight. Storage together with other chemicals, especially accelerators, other reducing materials and inflammable products must be avoided.

Handling

Fire hazard

No smoking, no naked lights, no sparks, or other sources of ignition

Explosion hazard

Avoid direct contact of organic peroxides with accelerators – add each component separately to the resin. Contamination with dust, heavy metals and their compounds, as well as chemicals in general, should be avoided.

Eye and skin injury

Always wear safety goggles and protective gloves, since organic peroxides have a corrosive effect on eyes and skin.

Additional information

On request we also provide specific publications on the use and the safe handling and storage of our products

How to act in case of:



Fire

Alert fire department. Fight small fire with powder or carbon dioxide and apply water.



Spillage

Liquids: absorb with inert material and add water.
Solids/pastes: take up with compatible aids and add water. Move to safe place and arrange disposal as soon as possible.



Skin contact

Wash with water and soap.



Eye contact

First rinse with water for at least 15 minutes. Always seek medical attention.



Ingestion


Drink large amounts of water and consult doctor immediately. Do not induce vomiting.

?

Do Sender Chem is recognized as the global leader in organic peroxide safety. We always place safety as our top priority.

Sharing our experience in safety is one of the most important resources we offer. Classroom reviews of safety and handling of organic peroxides, online trainings, consultation on storage and peroxide dosing equipment as well as demonstrations and publications on the safe use and handling of organic peroxides are just some of the services we offer.

How to store peroxides

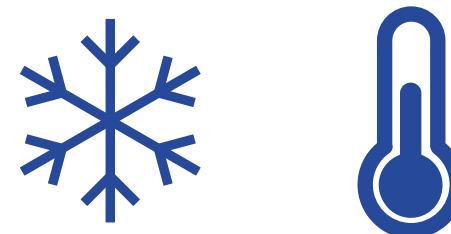


- Store in a cool room away from direct sunlight.
- Observe maximum and minimum storage temperature as printed on the packaging and SDS.
- Leave in the original packaging.
- Close packaging after use.



- Do not store together with accelerators or other chemicals
- Do not mix peroxides with accelerators.
- Avoid any contact with dust, metal or other chemicals.

How to handle peroxides

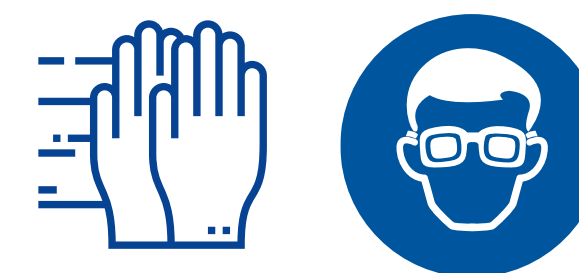

- Wear safety goggles.
- Wear appropriate protective gloves and clothing.
- Remove spillages immediately.
- Only use compatible materials when handling.



- Do not smoke.
- Avoid heat sources
- Avoid open fire.
- Never heat peroxides

Packaging

We continuously develop new and innovative packaging making logistics more efficient and improving safety standards even beyond existing transport regulations for both liquid and solid organic peroxides.



Do Sender Chem offers a variety of packaging options for both liquid and solid organic peroxides. For details of the packaging pls visit us at www.perodox.com or contact our sale for further information.

Enhanced advantages and safety features

- Easy operating, screw cap anti-glug device
- Ergonomically designed handle for ease and safety of handling
- Opaque exterior to protect contents from harmful UV rays
- Shaped for promotion of optimal air circulation while stacked
- Unique interior features allow more complete drainage




05












Application |








05.01






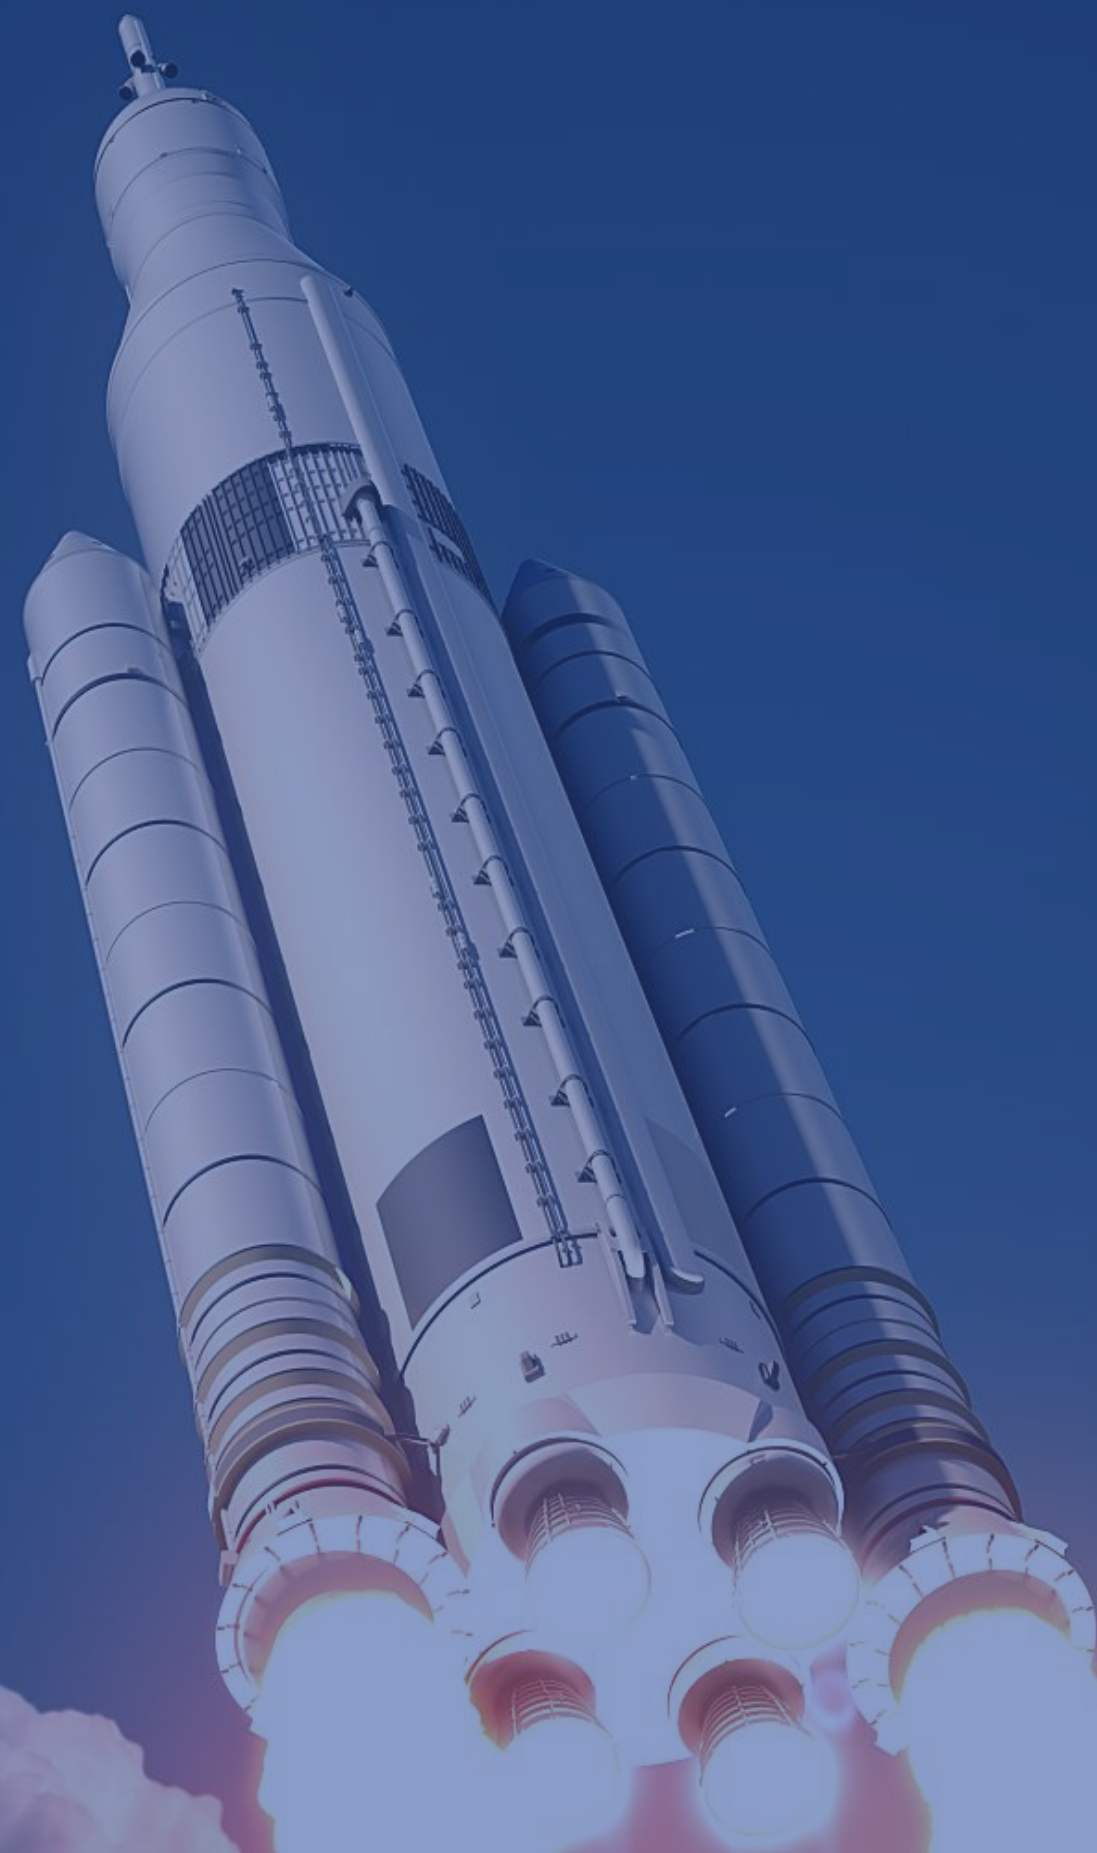


Composite thermosetting materials field

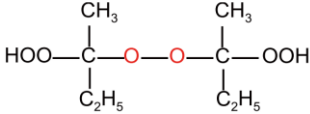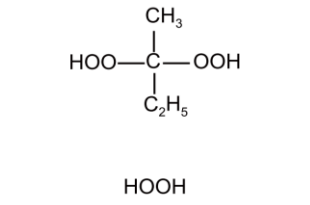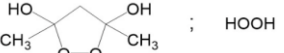Code	Chemical Name	CAS No.	Data			Features	SADT (°C)	Storage Temperature		UN No.	
			Content %	Active Oxygen %	Form			Ts Max	Ts Min		
Perodox MEKP92		1338-23-4		9.9	Ester Solution	High Reactivity	60	25		3105	
Perodox MEKP93				9.0	Ester Solution	Standard, Medium Activity	60	25		3105	
Perodox MEKP93VR				9.0	Ester Solution	Vanishing Red	60	25		3105	
Perodox MEKP93A				9.0	Aliphatic Solvent	Medium Activity, Without phthalates	60	25		3105	
Perodox MEKP93-C5A				9.0	TXIB Solvent	High Reactivity	60	30		3105	
Perodox MEKP93-C3A				5.3	TXIB Solvent	Summer High-temperature Type	60	30		3107	
Perodox MEKP93-D5					9.0	TXIB Solvent	Standard, Medium Activity	60	30		3105
Perodox MEKP93-L3A					5.3	TXIB Solvent	Summer High-temperature Type	60	30		3107
Perodox MEKP93-L5A					9.0	TXIB Solvent	Rubber clothing & vinyl models (low H2O2 content)	60	30		3105
Perodox MEKP94					9.9	Ester Solution	Medium Activity	60	25		3105
Perodox MEKP95-IN					8.5	Ester Solution	Low Activity	60	25		3105
Perodox MEKP96					9.9	Ester Solution	High Activity	56	25		3105
Perodox MEKP-HX106					9.9	Ester Solution	High Activity	56	25		3105
Perodox MEKP97					9.0	Ester Solution	Medium Activity	60	25		3105
Perodox 44B		37187-22-7 (EU: 13784-51-5)		4.1	Mixed Solvent	Quick Hardening	60	25	-10	3105	
Perodox 44B-VRN				4.1	Mixed Solvent	Quick Hardening	60	25	-10	3105	

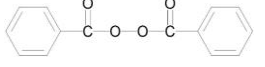
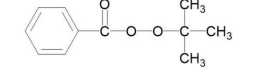
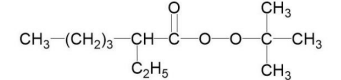
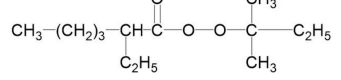
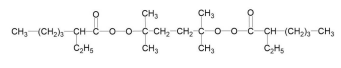
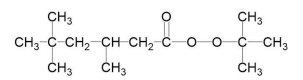
Code	Chemical Name	CAS No.	Data			Features	SADT (°C)	Storage Temperature		UN No.
			Content %	Active Oxygen %	Form			Ts Max	Ts Min	
Perodox L50-PS-BT50RBF		94-36-0	50	3.2	Paste, mixed solvent	High viscosity, suitable for putty repair and other fields, excellent stability	50	25		3108
Bluerox L50-57S			50	3.3	Powder, ester mixture	Standard Application	56	25		3106
Bluerox L50-57L			50	3.3	Powder, ester mixture	Used for high transparency products	56	25		3106
Bluerox L50-57X			50	3.3	Powder, ester mixture	Standard Application Extremely easy to mix uniformly (excellent free flow)	56	25		3106
Bluerox L40			40	2.6	Suspension	Pumpable spraying	50	25		3107
Perodox L75			75	5.0	Wet Powder	Common small particles	50	40		3104
Perodox C				614-45-9	98	8.1	Liquid	Medium Activity	60	25
Perodox 21S		3006-82-4	97	7.2	Liquid	High Activity	35	10	-30	3113
Perodox 21L			80	6.5	Solution mixed with accelerator	Long term storage	35	10		3113
Perodox 121		686-31-7	95	6.6	Liquid	High Activity	35	5	-20	3115
Perodox 121-C75			75	5.2	Soluble in odorless solvent	High activity, without phthalate esters	35	10		3115
Perodox 141		13052-09-0	92	6.8	Liquid	Efficient curing, High activity	35	15	-20	3113
Perodox 42S		13122-18-4	97	6.7	Liquid	Medium Activity	56	25	-20	3105
Perodox 42PR			89	6.2	Solution mixed with accelerator	High Activity	56	25	-20	3105

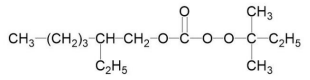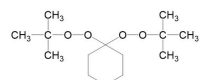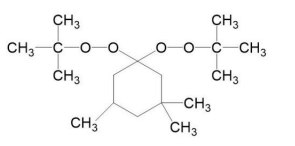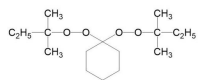
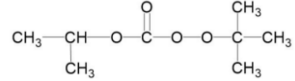
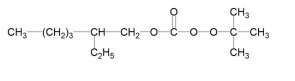
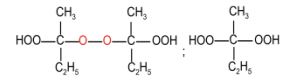
Code	Chemical Name	CAS No.	Data			Features	SADT (°C)	Storage Temperature		UN No.
			Content %	Active Oxygen %	Form			Ts Max	Ts Min	
Perodox 131		70833-40-8	94	5.8	Liquid	Efficient curing agent for high-temperature molding	56	20	3105	
Perodox 22		3006-86-8	80	9.8	Soluble in odorless solvent	Suitable for thin products, Without phthalates	60	25	3103	
Perodox 29-C90		6731-36-8	90	9.5	Soluble in odorless solvent	The shelf life of the material group leader, standard end peroxide	60	25	3103	
Perodox 29-C75			75	7.9			60	25	3103	
Perodox 122		15667-10-4	80	8.9	Soluble in odorless solvent	Intermediate/End Peroxide	56	30	3103	
Perodox BPIC-C75		2372-21-6	75	6.8	Soluble in odorless solvent	Efficient curing agent for high-temperature molding	70	25	-20	3103
Perodox 117		34443-12-4	97	6.3	Liquid	Efficient curing agent for high-temperature molding	60	20	3105	
Perodox MEKP-MIX28VR		1338-23-4 80-15-9		8.9	Mixture	Suitable for cured laminates, such as large wind turbine blades, etc	60	25	3105	

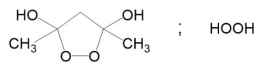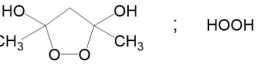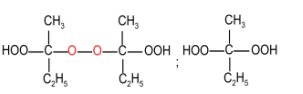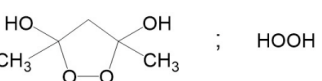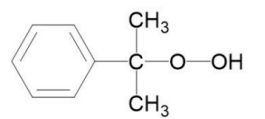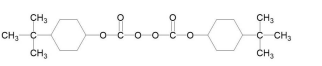Code	Chemical Name	CAS No.	Data			Features	SADT (°C)	Storage Temperature		UN No.
			Content %	Active Oxygen %	Form			Ts Max	Ts Min	
Perodox 44MAP		13784-51-5 614-45-9		4.5	Mixed Solvent	Efficient curing, High activity	60	25	-5	3105
Perodox 44M-APA				4.9	Mixed Solvent	Efficient curing, High activity	60	25	-5	3105
Perodox 44M-14		13784-51-5 75-91-2		5.8	Mixed Solvent	Low heat release peak	60	20	-10	3105
Perodox MEKP-MIX17		1338-23-4 75-91-2		9.9	Phthalate ester solvents	Moderate activity, Reduced peak heat release	60	25		3105
Perodox MEKP-MIX17DA				8.5	Mixed Solvent	Low activity, reduced peak heat release	60	25		3105
Perodox MEKP-MIX16		1338-23-4 13784-51-5		6.6	Mixed Solvent	Quick Hardening	56	25	-10	3105
Perodox MEKP-MIX16C				7.8	Mixed Solvent	Quick Hardening	50	25	-10	3105
Perodox K90		80-15-9	90	9.3	Liquid	Low Activity	70	40	-30	3109
Perodox K80			80	8.5	Liquid	Low Activity	70	40	-30	3109
Perodox 16		15520-11-3	96	3.9	Powder	High Activity	40	20		3114
Perodox 16-PS40			40	1.6	Paste	Pumpable Spraying	40	20	-30	3119






05.02







Initiators of polymerization for PE,PS,PVC,ABS, etc

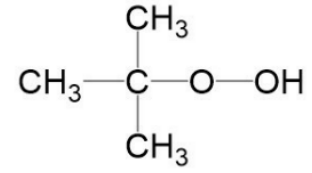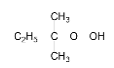
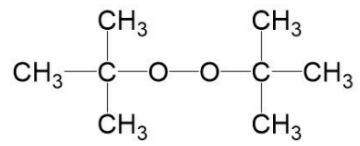
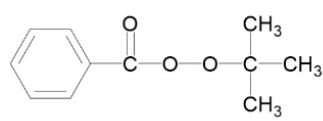
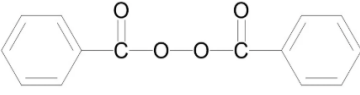
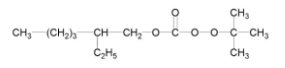
Code	Structural Formula	CAS No.	Data			Kinetic parameters			SADT (°C)	Storage Temperature		UN No.	Package
			Content %	Active Oxygen %	Form	0.1h	1h	10h		Ts Max	Ts Min		
				17.8		207	185	164					
Perodox A-W70		75-91-2	70	12.4	Liquid				90	35	0	3109	HDPE Drum
			70	12.4	Liquid				65	35	0	3109	IBC Totes
Perodox A-W80			80	14.2	Liquid,Organic Peroxide Mixture				80	40	0	3103	HDPE Drum
				15.4		228	185	164					
Perodox TAHP-W85		3425-61-4	85	13.1	Liquid				80	30		3109	HDPE Drum
				10.9		164	141	121					
Perodox B		110-05-4	99	10.8	Liquid				80	40	-30	3107	HDPE Drum
Perodox B-C90			90	9.8	Odorless mineral oil solution				75	40	-30	3109	IBC Totes
Perodox B-C75			75	8.1	Odorless mineral oil solution				75	40	-30	3109	IBC Totes
Perodox B-C50			50	5.4	Odorless mineral oil solution				80	40	-30	3109	IBC Totes
Perodox B-CS90			90	9.8	Solvent mixed solution				75	40	-30	3109	IBC Totes
				8.2		142	122	103					
Perodox C		614-45-9	98	8.1	Liquid				60	25	10	3103	HDPE Drum
Perodox C-C75			75	6.2	Odorless mineral oil solution				60	25	0	3105	HDPE Drum
				6.6		113	91	71					
Perodox L		94-36-0	75	5.0	Wet powder(Granule)				80	40		3104	Cardboard
Perodox L-SF			75	5.0	Wet powder(Granule)				80	40		3104	Cardboard
Perodox L-W40			40	2.6	Water lotion				60	30	0	3109	HDPE Drum
				6.5		137	117	98					
Perodox 117		34443-12-4	97	6.3	Liquid				60	20		3105	HDPE Drum




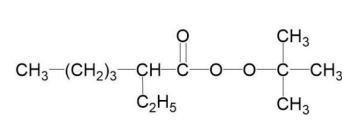
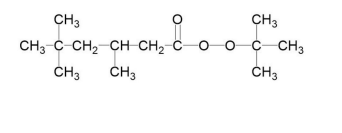
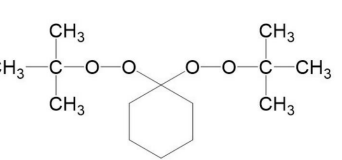
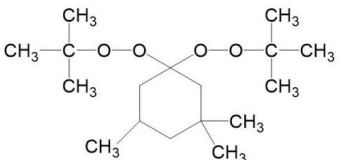
Code	Structural Formula	CAS No.	Data			Kinetic parameters			SADT (°C)	Storage Temperature		UN No.	Package
			Content %	Active Oxygen %	Form	0.1h	1h	10h		Ts Max	Ts Min		
				7.4		113	91	72					
Perodox 21S		3006-82-4	97	7.2	Liquid				35	10	-30	3113	HDPE Drum
Perodox 21-C70			70	5.2	Odorless mineral oil solution				35	10	-30	3113	HDPE Drum
Perodox 21-C50			50	3.7	Odorless mineral oil solution				40	10	-30	3119	HDPE Drum IBC Totes
Perodox 21-C30			30	2.2	Odorless mineral oil solution				40	10	-10	3119	IBC Totes
				7.0		135	114	94					
Perodox 42S		13122-18-4	97	6.7	Liquid				56	25	-20	3105	HDPE Drum IBC Totes
Perodox 42-C60			60	4.2	Odorless mineral oil solution				56	25	-20	3109	IBC Totes
Perodox 42-C30			30	2.1	Odorless mineral oil solution				56	25	-20	3109	IBC Totes
						134	113	94					
Perodox 22-C80		3006-86-8	9.8		Odorless mineral oil solution				60	25		3105	HDPE Drum
Perodox 22-C70			8.6		Odorless mineral oil solution				60	25		3105	HDPE Drum
Perodox 22-C50			6.1		Odorless mineral oil solution				70	25		3105	HDPE Drum
Perodox 22-C70			8.6		Mineral oil solution				60	25		3105	HDPE Drum
Perodox 22-C50			6.1		Mineral oil solution				70	25		3109	HDPE Drum
Perodox 22-C40			4.9		Mineral oil solution				70	25		3109	HDPE Drum
				10.6		128	105	85					
Perodox 29-C90		6731-36-8	90	9.5	Odorless mineral oil solution				60	25		3103	HDPE Drum
Perodox 29-E90			90	9.5	Mineral oil solution				60	25		3103	HDPE Drum
Perodox 29-A88			88	9.3	Solvent mixed solution				60	25		3103	HDPE Drum
Perodox 29-C75			75	7.9	Odorless mineral oil solution				60	25		3103	HDPE Drum
Perodox 29-C50			50	5.3	Odorless mineral oil solution				60	25		3107	HDPE Drum

Code	Structural Formula	CAS No.	Data			Kinetic parameters			SADT (°C)	Storage Temperature		UN No.	Package
			Content %	Active Oxygen %	Form	0.1h	1h	10h		Ts Max	Ts Min		
				11.1		126	106	87					
Perodox 122-C80		15667-10-4	80	8.9	Odorless mineral oil solution				56	30	3103	HDPE Drum	
Perodox 122-P55			55	6.1	Dissolve in odorless solvents				56	25	3103	HDPE Drum	
				6.14		134	113	95					
Perodox 131		70833-40-8	94	5.8	Liquid				56	20	3105	HDPE Drum	
				9.1		137	117	98					
Perodox BIPC-C75		2372-21-6	75	6.8	Odorless mineral oil solution				70	25	3103	HDPE Drum	
				9.6		143	121	102					
Perodox 17		995-33-5	95	9.1	Liquid				60	30	3103	HDPE Drum	
				10.9		134	114	96					
Perodox 133		690-83-5	60	6.6	Odorless mineral oil solution				60	30	3105	HDPE Drum	
				6.6		84	64	46					
Perodox 23		26748-41-4	95	6.2	Liquid				15	-10	-30	3115	HDPE Drum
Perodox 23-C75			75	4.9	Odorless mineral oil solution				20	-10	-20	3115	HDPE Drum
Perodox 23-WM50			50	3.3	Water and methanol solution				20	-10	-25	3119	HDPE Drum
										15	-10	-25	3119
Perodox 23-WE50			50	3.3	Water and ethanol solution				20	-10	-25	3119	HDPE Drum
Code	Structural Formula	CAS No.	Data			Kinetic parameters			SADT (°C)	Storage Temperature		UN No.	Package
Content %	Active Oxygen %	Form	0.1h	1h	10h	Ts Max	Ts Min						
				10.5		195	166	140					
Perodox K90		80-15-9	90	9.3	Liquid				70	40	-30	3109	HDPE Drum
Perodox K80			80	8.5	Liquid				70	40	-30	3109	HDPE Drum

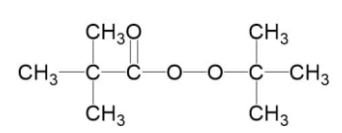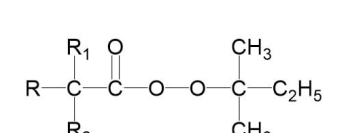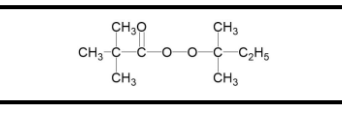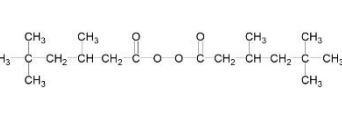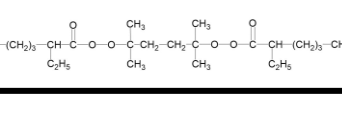Code	Structural Formula	CAS No.	Data			Kinetic parameters			SADT (°C)	Storage Temperature		UN No.	Package
			Content %	Active Oxygen %	Form	0.1h	1h	10h		Ts Max	Ts Min		
				9.2		94	75	57					
Perodox 25-C75		927-07-1	75	6.9	Odorless mineral oil solution				20	-5	-15	3113	HDPE Drum
Perodox 25-C40			40	3.7	Odorless mineral oil solution				25	-5	-20	3119	IBC Totes
Perodox 25-C25			25	2.3	Odorless mineral oil solution				25	-5	-20	3119	IBC Totes
									15	-5	-20	3119	Tank truck
Perodox 25-C20			20	1.8	Odorless mineral oil solution				15	-5	-20	3119	Tank truck
				8.5		91	72	55					
Perodox 125-C75		29240-17-3	75	6.4	Odorless mineral oil solution				25	-10	-30	3113	HDPE Drum
Perodox 125-C70			70	6.0	Odorless mineral oil solution				25	-10	-30	3115	HDPE Drum
				6.2		81	61	43					
Perodox 123		68299-16-1	75	4.6					20	-15	-25	3115	HDPE Drum
				5.1		96	77	59					
Perodox 36-C75		3851-87-4	75	3.8	Odorless mineral oil solution				20	0	-10	3115	HDPE Drum
Perodox 36-C60			60	3.0	Odorless mineral oil solution				20	0	-10	3115	HDPE Drum
Perodox 36-C50			50	2.5	Odorless mineral oil solution				20	0	-10	3115	HDPE Drum
				7.4		105	86	68					
Perodox 141		13052-09-0	92	6.8	Liquid				35	15	-20	3113	HDPE Drum

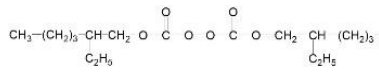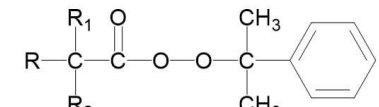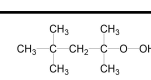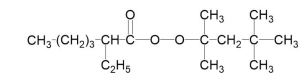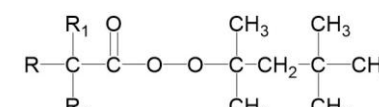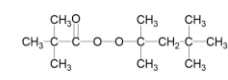Code	Structural Formula	CAS No.	Data			Kinetic parameters			SADT (°C)	Storage Temperature		UN No.	Package
			Content %	Active Oxygen %	Form	0.1h	1h	10h		Ts Max	Ts Min		
				4.6		83	64	47					
Perodox EHP		16111-62-9	98	4.5	Liquid				0	-20		3113	HDPE Drum
Perodox EHPS			98	4.5	Liquid				0	-20		3113	HDPE Drum
Perodox EHP-C75			75	3.5	Odorless mineral oil solution				5	-15	-25	3115	HDPE Drum
Perodox EHPS-C75			75	3.5	Odorless mineral oil solution				5	-15	-25	3115	HDPE Drum
Perodox EHP-W60			60	2.8	Odorless mineral oil solution				5	-15	-25	3115	HDPE Drum
						5.2		75	56	38			
Perodox 99-C75		26748-47-0	75	3.9					10	-20		3115	HDPE Drum
Perodox 99-W50			50	2.6					5	-20	-25	3119	IBC Totes
Perodox 99-WE50			50	2.6					5	-20	-25	3119	IBC Totes
Perodox 99-WE40			40	2.0					5	-20	-25	3119	IBC Totes
				10.9		180	159	140					
Perodox TMBH		5809-08-5	90	9.8	Liquid				60	25	-5	3105	HDPE Drum
				7.0		86	66	48					
Perodox 421		22288-43-3	75	5.2	Odorless mineral oil solution				20	-15	-25	3115	HDPE Drum
				5.3		76	57	40					
Perodox 423-C70		51240-95-0	70	3.8	Odorless mineral oil solution				15	-15		3115	HDPE Drum
Perodox 423-W50			50	2.7	Emulsion in water				15	-15	-20	3119	HDPE Drum IBC Totes
				7.0		86	66	48					
Perodox 425		22288-41-4	75	5.2	Odorless mineral oil solution				20	-15	-25	3115	HDPE Drum



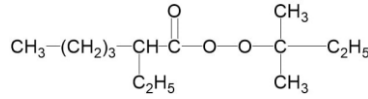
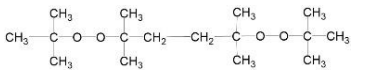
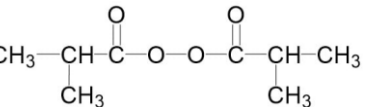
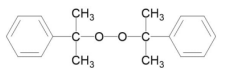
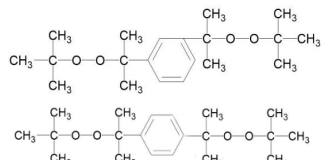
Code	Structural Formula	CAS No.	Data			Kinetic parameters			SADT (°C)	Storage Temperature		UN No.	Package	
			Content %	Active Oxygen %	Form	0.1h	1h	10h		Ts Max	Ts Min			
Perodox 121		686-31-7	95	6.6	Liquid				35	5	-20	3115	HDPE Drum	
Perodox 121-C75			75	5.2	Odorless mineral oil solution				35	10			3115	HDPE Drum
Perodox 121-E50			50	3.5	Mineral oil solution				45	20	-10		3115	HDPE Drum
Perodox 121-P60			60	4.2	Solvent mixed solution				30	5	-25		3119	HDPE Drum
				11.0				156	134	115				
Perodox 101		78-63-7	95	10.45	Liquid				80	40	10	3103	HDPE Drum	
Perodox 101-C92			92	10.1	Liquid				80	40	10		3103	HDPE Drum
Perodox 101-E70			70	3.9	Odorless mineral oil solution				75	40	5		3109	HDPE Drum IBC Totes
Perodox 101-PP20			20	2.2	On PP,beads				70	30			3108	Cardboard
Perodox 101-PP7.5			7.5	0.8	On PP,Powder				70	30	-25		None	Cardboard
				4.0				99	79	61				
Perodox 187-C30		3437-84-1	30	2.8	Odorless mineral oil solution				0	-20		3115	HDPE Drum	
Perodox 187-W26			26	2.4	Water and methanol solution				0	-20	-25		3119	HDPE Drum
				5.9				154	132	112				
Perodox BC99		80-43-3	99	5.9	Crystal				75	30		3110	Cardboard	
				9.4				156	134	114				
Perodox 14-PD		25155-25-3 2212-81-9	96	9.1	Poweder				80	25		3106	Cardboard	
Perodox 14-FL			96	9.1	Flake				80	20			3106	Cardboard
Perodox 14-40PD			40	9.1	Poweder				80	30			1325	Cardboard
Perodox 14-40GR			40	9.1	Granule				80	30			1325	Cardboard

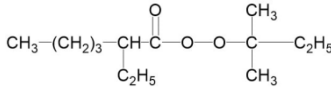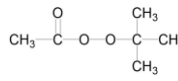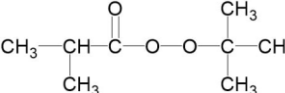
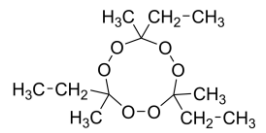
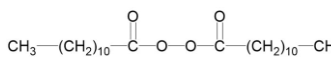
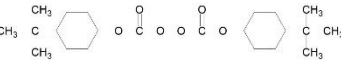
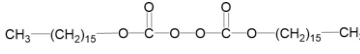
Code	Structural Formula	CAS No.	Data			Kinetic parameters			SADT (°C)	Storage Temperature		UN No.	Package
			Content %	Active Oxygen %	Form	0.1h	1h	10h		Ts Max	Ts Min		
Perodox F-C50		107-71-1	50	6.8	Odorless mineral oil solution				70	10	-15	3103	HDPE Drum IBC Totes
Perodox F-C40			40	4.8	Odorless mineral oil solution				60	10	-15	3109	IBC Totes
Perodox F-C30			30	3.6	Odorless mineral oil solution				60	10	-15	3109	IBC Totes
				10.0		134	114	96					
Perodox 41		109-13-7	96	5.0	Odorless mineral oil solution				30	10		3115	HDPE Drum
				18.2									
Perodox 301		24748-23-0	41	7.4	Solution in iso Parrafin				110	40	10	3105	HDPE Drum
Perodox 301-20PP			8	1.4	On PP beads				90	40		3110	HDPE Drum
				4.0									
Perodox LUNA-FL		105-74-8	99	6.0	Flake				50	30		3106	Cardboard
Perodox LUNA-PD			99	4.8	Powder				50	30		3106	Cardboard
Perodox LUNA-W40			40	3.6	Water lotion				50	20		3109	HDPE Drum IBC Totes
				4.0		82	64	48					
Perodox 16-FL		15520-11-3	95.6	3.8	Powder				40	20		3120	Cardboard
Perodox 16-PD			96	3.8	Powder				40	20		3120	Cardboard
Perodox 16-W35			25	1.0	Suspension				40	15		3119	HDPE Drum
				2.8		84	65	48					
Perodox 24-FL		26322-14-5	94.5	2.6	Flake				40	20		3120	Cardboard
Perodox 24-PD			91	2.6	Powder				40	20		3120	Cardboard
Perodox 24-W35			35	1.0	Water lotion				40	15	0	3119	HDPE Drum
				3.1		84	65	48					
perodox 26		53220-22-7	96	3.0	Flake				35	15		3116	Cardboard

05.03

Crosslinking agent for Rubber, Elastomer, Polyethylene, etc

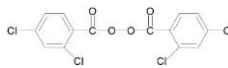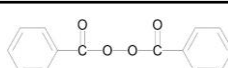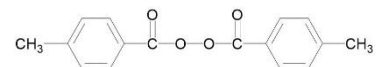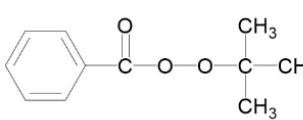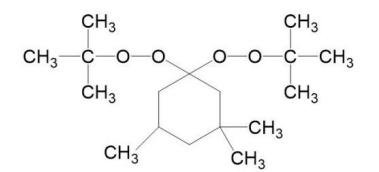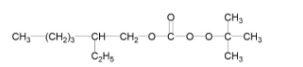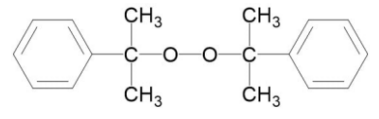

Code	Structural Formula	CAS No.	Data			Processing process parameters		SADT (°C)	Storage Temperature		UN No.	Package
			Content %	Main Carrier	Form	Safe processing temperature	Typical crosslinking temperature		Ts Max	Ts Min		
						75	90					
Perodox D24		133-14-2	50	Silicone oil	Paste			60	30		3106	Drum
						85	105					
Perodox L		94-36-0	50	Silicone oil	Paste			60	30		3108	Drum
						85	110					
Perodox PM-50PS		895-85-2	50	Silicone oil	Paste			80	30		3106	Drum
Perodox C		614-45-9	98		Liquid			60	25	10	3103	HDPE Drum
Perodox C-C75			50	SiO2	Powder			60	25		3106	Cardboard
						115	145					
Perodox 29-40B-PD		6731-36-8		CaCO3	Powder			60	30		3110	Cardboard
Perodox 29-40MB				EPR,CaCO3				60	30		3110	Cardboard
Perodox 29-C50				Odorless mineral oil solution				60	25		3107	HDPE Drum
						120	150					
Perodox 117S		34443-12-4	98		Liquid			60	20		3105	HDPE Drum
						130	170					
Perodox BC40B		80-43-3	40	CaCO3	Powder			80	30		3077	Cardboard
Perodox BC40K			40	Clay	Powder			80	30		3077	Cardboard
Perodox BC40MB			40	EPR,CaCO3	Granule			70	30		3077	Cardboard
Perodox BC40S			40	Silicone oil	Paste			90	30		3077	Drum

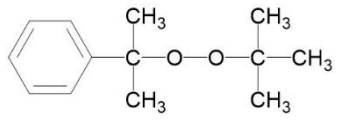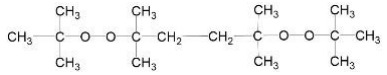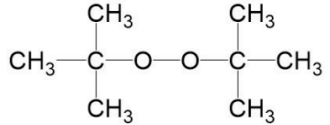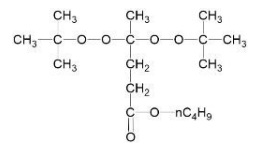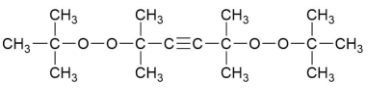Code	Structural Formula	CAS No.	Data			Processing process parameters		SADT (°C)	Storage Temperature		UN No.	Package	
			Content %	Main Carrier	Form	Safe processing temperature	Typical crosslinking temperature		Ts Max	Ts Min			
						135	175						
Perodox 14-PD		25155-25-3 2212-81-9	98		Poweder				80	25	3106	Cardboard	
Perodox 14-B			40	CaCO3	Poweder/Granule				80	30	1325	Cardboard	
Perodox 14-K			40	Clay	Poweder/Granule				80	30		Cardboard	
Perodox 14-4MB			40	EPR,CaCO3	Granule				80	30		Cardboard	
						135	175						
Perodox T		3457-61-2	96		Liquid			80	40	16	3109	HDPE Drum	
Perodox T-50D			50	SiO2	Powder				80	40		3108	Cardboard
						135	175						
Perodox 101-C92		78-63-7	92		Liquid			80	40	10	3103	HDPE Drum	
Perodox 101-D50PD			50	SiO2	Powder				80	30		3108	Cardboard
Perodox 101-D45PD			45	SiO2	Powder				80	30	0	3108	Cardboard
Perodox 101-B45PD			45	CaCO3	Powder				80	30		3108	Cardboard
Perodox 101-PP10			10	PP	Powder				70	30		3108	Cardboard
Perodox 101-S45PS			45	Silicone oil	Paste				80	30		3108	Drum
						145	80						
Perodox B		110-05-4	99	10.8	Liquid			80	40	-30	3107	HDPE Drum	
						125	160						
Perodox 17-PD40		995-33-5	40	CaCO3	Powder			60	30		3108	Cardboard	
Perodox 17-40MB			40	EPR,CaCO3	Powder				60	30		3108	Cardboard
						145	185						
Perodox 145-C85		1068-27-5	85	Mineral oil	Liquid			80	30	10	3103	HDPE Drum	
Perodox 145-ET45B			45	CaCO3	Powder				70	30		3106	Cardboard

05.04

Dosage levels reference

Organic Peroxide	Perodox 14-B	Perodox B40	Perodox 29	Perodox 101-D45	Perodox 17-PD40
Safe processing temperature	135	130	115	135.0	125
Typical crosslinking temperature	175	170	145	175.0	160
Type of the polymer	The number of peroxides per 100 parts of polymer ω%				
EMP;EPDM Ethylene Propylene Monomer Ethylene Propylene Diene Monomer	3.8-6.4	6.0-10.0	6.8-11.2	3.8-6.0	7.5-12.5
BR Butadiene rubber	0.5-1.2	1.0-2.0	1.0-2.2	0.6-1.2	1.2-2.3
SBR Styrene Butadiene Rubber	1.1-2.4	1.7-3.8	1.9-4.0	1.2-2.1	2.0-4.6
CR Chloroprene Rubber	0.5-1.7	1.0-2.7	1.1-3.0	0.7-1.5	1.2-3.4
NR;IR Natural Rubber;Isoprene Rubber	1.4-2.5	2.0-4.0	2.4-4.5	1.4-2.4	2.5-5.0
NBR Nitrile Butadiene Rubber	1.5-2.5	2.4-4.0	2.6-4.5	1.5-2.4	2.9-5.0
HNBR Hydrogenated Nitrile Butadiene Rubber	3.8-6.0	6.1-10.2	6.8-11.2	3.8-6.0	2.9-5.0
EVA Ethylene Vinyl Acetate	1.5-3.0	2.4-4.8	2.6-5.2	1.5-2.8	7.5-12.5
PE Polyethylene	1.0-4.2	1.5-6.8	1.5-7.5	0.9-4.0	3.0-5.8
CM/CPE Chlorinated Polyethylene	3.8-5.8	6.0-9.5	6.8-10.5	3.9-5.6	1.7-8.5
Q	0.6-0.8	1.0-2.0	None	0.5-0.8	7.5-11.5
Organic Peroxide	Perodox D24		Perodox PM-50PS		
Safe processing temperature	75		85		
Typical crosslinking temperature	90		110		
Type of the polymer	The number of peroxides per 100 parts of polymer ω%				
Q	1.1-2.3		1.1-2.3		

06

Perodox MEKP

CAS No.

1338-23-4

TSCA Status

listed on inventory

EINECS/ELINCS No.

215-661-2

Appearance

Clear colorless liquid

Total active oxygen

8.8-9.0 %

Applications


Perodox MEKP is a general purpose methyl ethyl ketone peroxide (MEKP) for the curing of unsaturated polyester resins in the presence of a cobalt accelerator at room and elevated temperatures. The curing system Perodox MEKP-50/cobalt accelerator is particularly suitable for the curing of gelcoat resins, laminating resins, lacquers and castings; moreover the manufacture of light resistant parts may be possible contrary to the curing system benzoyl peroxide/amine accelerator. Practical experience throughout many years has proven that by the guaranteed low water content and the absence of polar compounds in Perodox MEKP-50, this peroxide is very suitable in GRP products for e.g. marine applications.

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 60°C

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

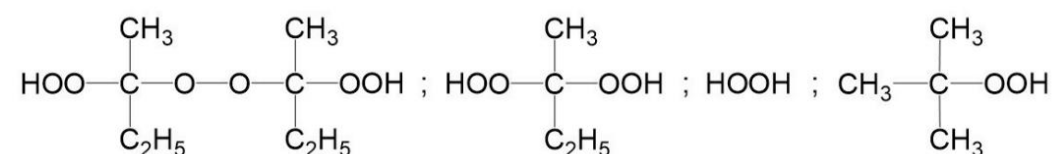

Methyl Ethyl ketone Peroxide

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (Ts max.) for each organic peroxide product.

Ts Max. 25°C

Note When stored under these recommended storage conditions, MEKP will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg corrugated box packaging.

Perodox MEKP is classified as Organic peroxide type D; liquid, Division 5.2; UN 3105.

Major decomposition products

Carbon dioxide, water, acetic acid, formic acid, propionic acid, methyl ethyl ketone.

Notice

Based on the different active oxygen of the MEKP series, Do Sender Chem makes a types table, Please contact us for advice on the best curing system for your specific application

Perodox 44B

CAS No.


37187-22-7 (for EU: 13784-51-5)

TSCA Status

listed on inventory

EINECS/ELINCS No.

253-384-9 (for EU: 237-438-9)

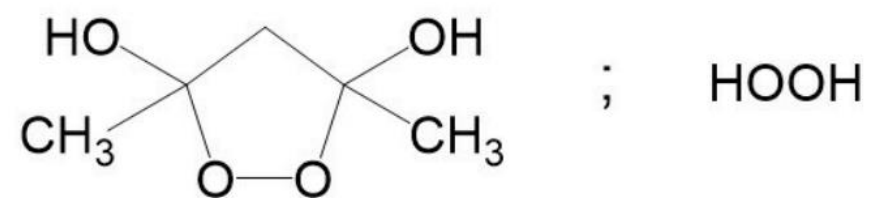

Acetyl acetone peroxide

Applications

Perodox 44B is an acetylacetone peroxide formulation for fast curing of unsaturated polyester resins in the presence of a cobalt accelerator at room and elevated temperatures.

Perodox 44B is an acetyl acetone peroxide formulation for the curing of unsaturated polyester resins in the presence of a cobalt accelerator at room and elevated temperatures. With the curing system Perodox 44B /cobalt accelerator a much faster speed of cure may be achieved than with curing systems based on a MEKP plus cobalt accelerator, at room and elevated temperatures. Normally the gel times with Perodox 44B are comparable to those with Perodox M-50.

Perodox 44B is particularly suitable in those applications where a fast mold-turnover is required, e.g. for the cold press molding or resin injection molding techniques. The system Perodox 44B /cobalt accelerator will give a higher peak exotherm than a standard MEKP/cobalt accelerator system. Due to this fact, is it recommendable to avoid the production of too thick laminates in one operation. At low temperatures a reasonable speed of cure is still obtained when Perodox 44B is used in combination with large amounts of cobalt accelerator possibly in combination with N,N Dimethylaniline as promotor.

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 60°C

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (Ts max.) for each organic peroxide product.

Ts max. 25°C

Ts min. - 10°C

Note When stored according to these recommended storage conditions, Perodox 25 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox 44B land and sea transport is classified as Organic peroxide type E; liquid, Division 5.2; UN 3107. Air transport is classified as Organic peroxide type D; liquid, Division 5.2; UN 3105.

Major decomposition products

Carbon dioxide, acetyl acetone, mixture of aliphatic acids, water

Perodox L75

CAS No.

94-36-0

TSCA Status

listed on inventory

EINECS/ELINCS No.

202-327-6

Molecular weight


242.2

Active oxygen

4.88-5.02 %

Assay

74.0-76.0 %

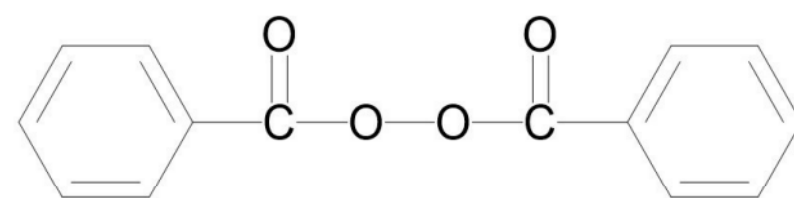

(Di)Benzoyl peroxide 75%

Perodox L75 is an initiator (powder formulation with 75% benzoyl peroxide and 25% water) used for curing unsaturated polyester, vinyl ester and acrylic thermoset resins at ambient or slightly elevated temperatures. It is often used in conjunction with tertiary amine accelerators at ambient conditions. Typical uses include cast polymer, panels, chemical anchors and mine bolts and RTM.

Applications

BPO75 can be used for the market segments: polymer production, thermoset composites and acrylics production with their different applications/functions.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For BPO75 in chlorobenzene half-life at other temperatures can be calculated by using the equations and constants mentioned below:

0.1 hr	at 113°C (235°F)
1 hr	at 91°C (196°F)
10 hr	at 71°C (160°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E_a	122.35 kJ/mole
A	6.94E+13 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT	80°C
Emergency temperature (T_e)	75°C
Method	The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature ($T_s \text{ max.}$) for each organic peroxide.

$T_s \text{ Max.}$	40°C
Note	When stored under the recommended storage conditions, Perodox L75 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport


Packed in plastic drums with specifications of 25kg. BPO75 is classified as Organic peroxide type C; solid, Division 5.2; UN 3104; PG II.

Major decomposition products

Carbon dioxide, Benzene, Benzoic acid

Perodox L50-PS

CAS No.
94-36-0
TSCA Status
listed on inventory
EINECS/ELINCS No.
202-327-6
Molecular weight
242.2
Active oxygen content peroxide
6.61%
Concentration
3.24-3.37%

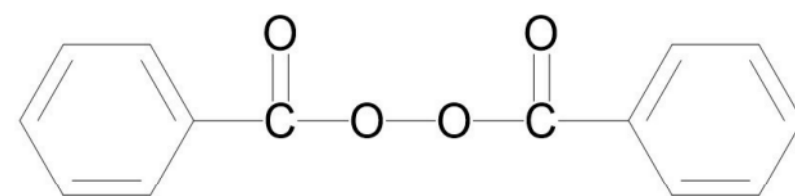

(Di)Benzoyl peroxide 50%

Perodox L50-PS is the preferred BPO paste for unsaturated polyester & vinyl ester resins.

Applications

Perodox L50-PS is a paste containing 50% dibenzoyl peroxide without phthalate for the curing of unsaturated polyester resins at ambient and elevated temperatures. At temperatures up to 80°C, BPO50 Paste should be used in combination with an aromatic tertiary amine accelerator, above 80°C the use of an accelerator is not required. BPO50 Paste has primarily been developed for the putty market. BPO50 Paste shows a very good chemical and physical stability and is therefore very suitable for tube filling.

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT Method 70°C (158°F)
The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (Ts max.) for each organic peroxide.

Ts Max. 30°C (86°F)
Note When stored under the recommended storage conditions, BPO50 Paste will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

Packed in plastic drums with specifications of 25kg.
BPO50 Paste is classified as Organic peroxide type E; solid, Division 5.2; UN 3108; PG II.

Major decomposition products

Carbon dioxide, benzene, benzoic acid

Perodox B

CAS No.

110-05-4

TSCA Status

listed on inventory

Active oxygen content peroxide

10.94%

EINECS/ELINCS No.

203-733-6

Molecular weight

146.2

Characteristics


Clear liquid

Density, 20 °C

0.800 g/cm³

Viscosity, 20 °C

0.9 mPa.s

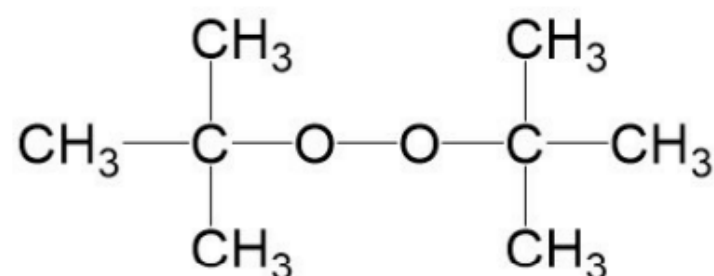

Di-Tert-Butyl Peroxide

Polymerization of acrylate and methacrylate: Within the temperature range of 130-175 °C, it can be used as an initiator for solution polymerization or copolymerization of acrylate and methacrylate, especially in the production of coatings. It can also be used as an initiator for bulk and suspension polymerization or copolymerization of acrylate and methacrylate.

Applications

DTBP(Di-tert-butyl peroxide) can be used for the market segments: polymer production, polymer crosslinking and acrylics production with their different applications/functions. For more information please check our website and/or contact us.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For DTBP in chlorobenzene half-life at other temperatures can be calculated by using the equations and constants mentioned below:

0.1 hr	at 164°C (327°F)
1 hr	at 141°C (286°F)
10 hr	at 121°C (250°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E_a	153.46 kJ/mole
A	4.20E+15 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition may occur with a substance in the packaging as used for transport is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 80°C (176°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides, a loss of quality will occur over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

T_s Max. 40°C (104°F) and

T_s Min. -30°C (-22°F) to prevent crystallization

Note When stored according to these recommended storage conditions, DTBP will remain within the Do Sender Chem specifications for a period of at least 6 months after delivery.

Packaging and transport

Polyethylene white plastic drum 20KG.

DTBP is classified as Organic peroxide type E; liquid, Division 5.2; UN 3107.

Major decomposition products

Acetone, Methane, tert-Butanol.

Perodox C

CAS No.

614-45-9

TSCA Status

listed on inventory

EINECS/ELINCS No.


210-382-2

Molecular weight

194.2

Active oxygen

8.07-8.24 %

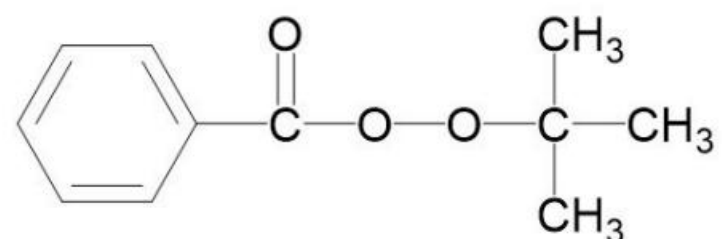

Tert-Butyl peroxy benzoate

In the temperature range of 100-170°C, Perodox C can be used as an initiator for the solution polymerization or copolymerization of acrylate and methacrylate, especially for the production of coatings.

Applications

TBPB can be used for the market segments: polymer production, polymer crosslinking, thermoset composites and acrylics production with their different applications/functions. For more information please check our website and/or contact us.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. Perodox C in chlorobenzene half-life at other temperatures can be calculated by using the equations and constants mentioned below:

0.1 hr	at 142°C (288°F)
1 hr	at 122°C (252°F)
10 hr	at 103°C (217°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E_a	151.59 kJ/mole
A	$2.23E+16 \text{ s}^{-1}$
R	8.3142 J/mole·K
T	$(273.15 + ^\circ\text{C}) \text{ K}$

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 60°C (140°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature ($T_s \text{ max.}$) for each organic peroxide product.

$T_s \text{ Max.}$ 25°C (77°F)

$T_s \text{ Min.}$ 10°C (50°F) *

Note * to prevent crystallization. When stored under the recommended storage conditions, Do Sender Chem will remain within the specifications for a period of at least 3 months after delivery.

Packaging and transport

25 kg polyethylene packaging

Perodox C is classified as Organic peroxide type C; liquid; Division 5.2; UN 3103.

Major decomposition products

Carbon dioxide, Acetone, Methane, tert-Butanol, Benzoic acid, Benzene

Perodox 21

CAS No.

3006-82-4

TSCA Status

listed on inventory

Active oxygen content peroxide

7.30%

EINECS/ELINCS No.

221-110-7

Molecular weight

216.3

Perodox 21 is an efficient initiator for the production of Low Density Polyethylene (LDPE). It is used both for tubular and autoclave processes. In most cases a combination with other peroxides is used to ensure a broad reactivity range.


Applications

TBPEH(tert-Butyl peroxy-2-ethylhexanoate) can be used for the market segments: polymer production, thermoset composites and acrylics with their different applications/functions. For more information please check our website and/or contact us.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 21 in chlorobenzene half-life at other temperatures can be calculated by using the equations and constants mentioned below:

0.1 hr	at 113°C
1 hr	at 91°C
10 hr	at 72°C
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E _a	124.90 kJ/mole
A	1.54E+14 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

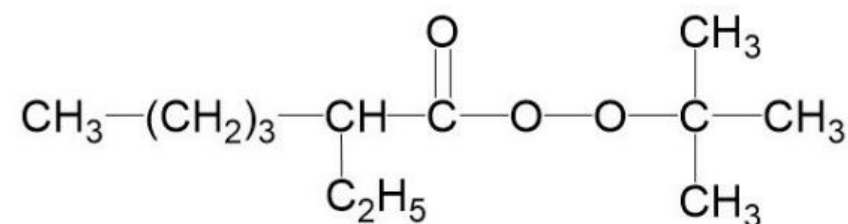

Tert-butyl peroxy-2-ethylhexanoate

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT	35°C
Emergency temperature (T _e)	25°C
Control temperature (T _c)	20°C
Method	The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_{s max.}) for each organic peroxide product.

T _{s Max.}	10°C and
T _{s Min.}	-30°C to prevent crystallization
Note	When stored according to these recommended storage conditions, Perodox 21 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg polyethylene drum. Perodox 21 is classified as Organic peroxide type C; liquid, temperature controlled, Division 5.2; UN 3113; PG II. Control Temperature = 20 °C Emergency Temperature = 25 °C

Major decomposition products

Carbon dioxide, tert-Butanol, Heptane, 3-tert-Butoxyheptane

Perodox K90

CAS No.

80-15-9

TSCA Status

listed on inventory

EINECS/ELINCS No.

210-254-7

Molecular weight

152.2

Appearance


Clear liquid

Density, 20 °C

1.040 g/cm³

Viscosity, 20 °C

5 mPa.s

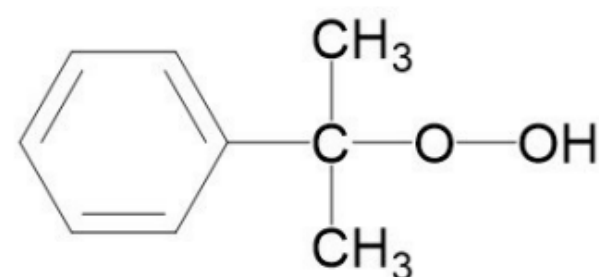

Cumyl Hydroperoxide 90%

Perodox K90 is an initiator (90% active ingredient in aromatic solvent mixture) for (co)polymerization of (meth)acrylates.

Applications

For Polymer production and Poly(meth)acrylics: Perodox K90 may be used for various polymerization reactions. It can be used in emulsion, solution and bulk polymerizations. In emulsion processes, CHP may be activated by organic-soluble or water-soluble reducing agents, or by metal compounds to achieve polymerization at room temperature or lower. When no accelerators are used, effective polymerization can be obtained in the temperature range of 50-200°C. For example, styrene and methyl methacrylate can be polymerized in bulk in the temperature range of 60-100°C using CHP. CHP may also be used for emulsion polymerization of various vinyl monomers. In this case CHP may be used in combination with reducing agents to achieve reproducible results at low temperatures. For Thermoset: CHP may be used as an initiator for the room temperature cure of promoted unsaturated polyester and vinyl ester resins, and elevated temperature cure of non-promoted resins.

Thermal stability

Organic peroxides are thermally unstable substances which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition may occur with a substance in the packaging as used for transport is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 60°C

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature

Ts Max. 25°C

Note When stored under the recommended storage conditions, Perodox K90 will remain within the Do Sender Chem specifications for a period of at least 9 months after delivery.

Packaging and transport


Packed in plastic drums with specifications of 1000kg, 200kg, and 25kg. Perodox K90 is classified as Organic peroxide type F; liquid, Division 5.2; UN 3109.

Major decomposition products

Acetophenone, phenylisopropanol, methane, water.

Perodox K80

CAS No.
80-15-9
TSCA Status
listed on inventory
EINECS/ELINCS No.
210-254-7
Molecular weight
152.2
Appearance
Clear liquid
Density, 20 °C
1.06 g/cm³
Viscosity, 20 °C
10.4 mPa.s

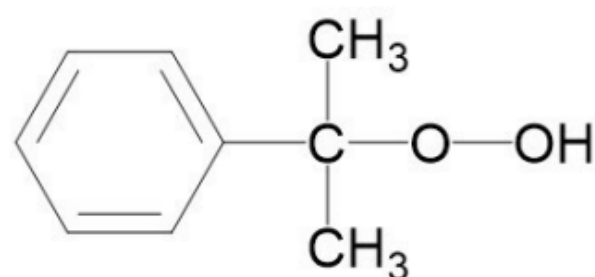

Cumyl Hydroperoxide 80%

Perodox K80 may be used for various polymerization reactions. It can be used in emulsion, solution and bulk polymerizations. In emulsion processes, CHP80 may be activated by organic-soluble or water-soluble reducing agents, or by metal compounds to achieve polymerization at room temperature or lower. When no accelerators are used, effective polymerization can be obtained in the temperature range of 50-200°C. For example, styrene and methyl methacrylate can be polymerized in bulk in the temperature range of 60-100°C using Perodox K80. Perodox K80 may also be used for emulsion polymerization of various vinyl monomers. In this case CHP90 may be used in combination with reducing agents to achieve reproducible results at low temperatures.

Applications

Perodox K80 can be used for the market segments: polymer production, thermoset composites and acrylics production with their different applications/functions. For more information please check our website and/or contact us.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life (t_{1/2}) at various temperatures. The half-life of CHP80 in chlorobenzene is:

0.1 hr	at 195°C
1 hr	at 166°C
10 hr	at 140°C
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2) / k_d$
E _a	132.56 kJ/mole
A	1.15E+12 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition may occur with a substance in the packaging as used for transport is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT	75°C for small cans, 70°C for IBC's and 65°C for bulk tanks.
Method	The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature

Ts Max.	40°C
Ts Mix.	-30°C *
Note	When stored under the recommended storage conditions, CHP80 will remain within the Do Sender Chem specifications for a period of at least 6 months after delivery.

Packaging and transport

Packed in plastic drums with specifications of 1000kg, 200kg, and 25kg. CHP is classified as Organic peroxide type F; liquid, Division 5.2; UN 3109.

Major decomposition products

Acetophenone, 2-Phenylisopropanol, Methane

Perodox 14

CAS No.

25155-25-3,2212-81-9

TSCA Status

listed on inventory

Active oxygen content peroxide

9.45%

EINECS/ELINCS No.


218-664-7

Molecular weight


338.5

Concentration

9.08% min.

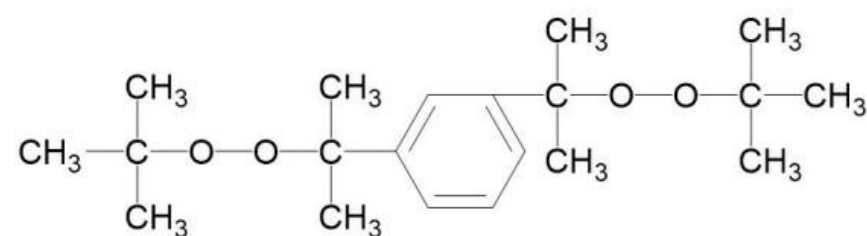

1,3-Di-(2-tert-butylperoxyisopropyl)benzene

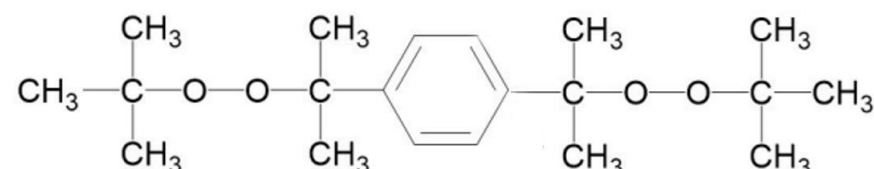

1,4-Di-(2-tert-butylperoxyisopropyl)benzene

Perodox 14 is a bifunctional peroxide which is used for the crosslinking of natural rubber and synthetic rubbers, as well as polyolefins. Rubber compounds containing BIPB have excellent scorch safety, and under certain conditions one step mixing is possible. Safe processing temperature: 135°C (rheometer ts2 > 20 min.). Typical crosslinking temperature: 175°C (rheometer t90 about 12 min.).

Applications

Perodox 14 can be used for the market segments: polymer production and polymer crosslinking with their different applications/functions.

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 80°C (176°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (Ts max.) for each organic peroxide product.

Ts max. 30°C (86°F)

Note Perodox 14 can be safely stored at 30°C (86°F) max without loss of activity. When stored under strictly recommended storage conditions, BIPB will remain within the Do Sender Chem specifications for a period of at least 12 months after delivery.

Packaging and transport

20 kg corrugated box packaging

BIPB is classified as Organic peroxide type D; solid, Division 5.2; UN 3106. PG II

Major decomposition products

tert-Butanol, Methane, Acetone, Bis(2-hydroxyisopropyl)benzene.

Attn

Perodox 14-96% owns flakes and powder forms

Perodox 14-40% owns powder and granule forms

Usually Perodox 14 combined with CAS 1025-15-6 TAIC Triallyl isocyanurate as the Crosslinking Coagent

Perodox LUNA

CAS No.

105-74-8

TSCA Status

listed on inventory

Active oxygen content peroxide

4.01%

EINECS/ELINCS No.

203-326-3

Molecular weight


398.6

Appearance

White flakes without any contamination

Assay

≥ 99.0 %

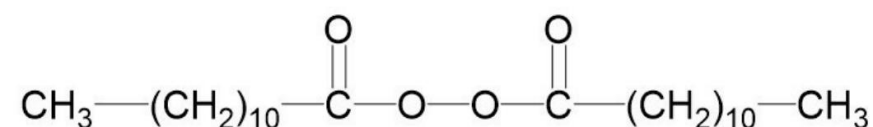

Di lauroyl peroxide

Perodox LUNA is a widely used initiator for the suspension and mass polymerization of vinyl chloride between 60°C and 80°C. In many cases LPO is combined with a more active initiator, such as a peroxydicarbonate to increase reactor efficiency. LPO is used as an initiator for the high pressure polymerization of ethylene, but because of its poor solubility in most aliphatics, it is in many cases replaced by other peroxides such as Di(3,5,5-trimethylhexanoyl) peroxide (TMHP). The advantage of LPO is the possibility of storing at ambient temperature. LPO is also used as an initiator for the polymerization of methylmethacrylate at 60-90°C. LPO is often applied as a replacement for 2,2'-Azobis(isobutyronitril) (AIBN).

Applications

LPO can be used for the market segments: polymer production, thermoset composites and acrylics production with their different applications/functions. For more information please check our website and/or contact us.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life (t_{1/2}) at various temperatures. For LPO in chlorobenzene:

0.1 hr	at 99°C
1 hr	at 79°C
10 hr	at 61°C
Formula 1	kd = A·e-Ea/RT
Formula 2	t _{1/2} = (ln2)/kd
Ea	123.37 kJ/mole
A	3.92E+14 sP-1P
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 50°C

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva)

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (Ts max.) for each organic peroxide product.

Ts Max. 30°C

Note When stored under these recommended storage conditions, LPO will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg corrugated box packaging

LPO is classified as Organic peroxide type D; solid, Division 5.2; UN 3106. PG II

Major decomposition products

Carbon dioxide, Docosane, Undecane, Undecyl dodecanoate.

Perodox MEKP-Types of Active Oxygen

PRODUCT	DESCRIPTION	ACTIVE OXYGEN CONTENT	SAFETY INFORMATION	
			Ts (°C)	SADT (°C)
Methyl Ethyl Ketone Peroxide CAS 1338-23-4				
Perodox MEKP-10	Standard, general purpose MEKP, low water content, absence of polar solvents	9.9	25	60
Perodox MEKP-90	Standard, general purpose MEKP, low water content, absence of polar solvents	8.9	25	60
Perodox MEKP-90H	Fast gel time, general purpose lamination	9.9	25	60
Perodox MEKP-90L	High Dimer, designed for VE resins & gel coats. Less foaming	8.5	25	60
Perodox MEKP-100	Economical, general purpose MEKP	8.9	25	55
Perodox MEKP-200	Economical, general purpose MEKP	9.9	25	55
Perodox MEKP-1000P	MEKP gel, designed for putty curing	8	25	55
Methyl Ethyl Ketone Peroxide (Phthalate Free) CAS 1338-23-4				
Perodox MEKP-90A	Standard, general purpose MEKP, low water content, Phthalate free	8.9	25	60
Perodox MEKP-90HA	Fast gel time, general purpose lamination, Phthalate free	9.9	25	60

Perodox 117

CAS No.

34443-12-4

TSCA Status

listed on inventory

EINECS/ELINCS No.

252-029-5

Appearance

Clear colorless liquid

Active oxygen content peroxide

6.49%

Appearance

Clear liquid

Assay

≥ 95.0 %


Applications

Perodox 117 can be used as initiator for the solution (co)polymerization of acrylates and methacrylates in the temperature range of 100-170°C, amongst others for the manufacture of coatings. It can also be applied as an initiator for the bulk and suspension (co)polymerization of acrylates and methacrylates.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 117 in chlorobenzene:

0.1 hr	at 137°C (279°F)
1 hr	at 117°C (243°F)
10 hr	at 98°C (208°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
Ea	151.72 kJ/mole
A	4.07E+16 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

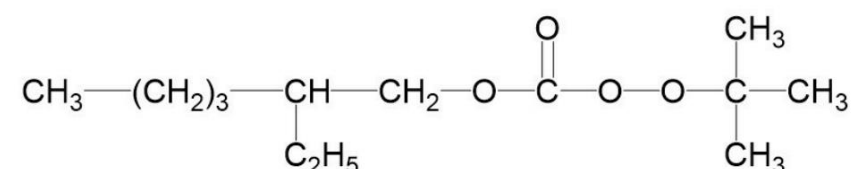

tert-Butylperoxy 2-ethylhexyl carbonate

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 60°C (140°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

T_s Max. 20°C (68°F)

Note When stored under these recommended storage conditions, MEKP will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

25 kg corrugated box packaging.

Perodox 117 is classified as Organic peroxide type D; liquid, Division 5.2; UN 3105.

Major decomposition products

Carbon dioxide, tert-Butanol, 2-Ethylhexanol

Perodox 42

CAS No.

13122-18-4

TSCA Status

listed on inventory

EINECS/ELINCS No.

236-050-7

Active oxygen

6.74 %

Appearance


Clear liquid

Assay

97%

Color

50 Pt-Co / APHA max.

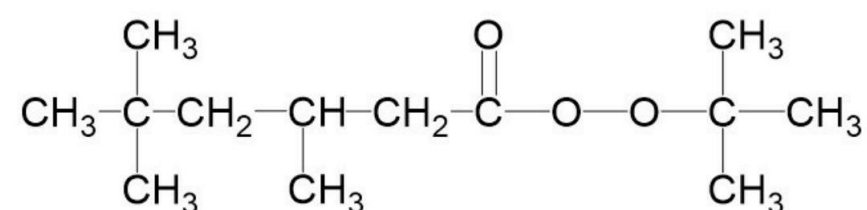

tert-Butyl peroxy-3,5,5-trimethylhexanoate

Perodox 42S is an initiator for (co)polymerization of (meth)acrylates.

Applications

Perodox 42 (tert-Butyl peroxy-3,5,5-trimethylhexanoate) can be used for the market segments: polymer production, thermoset composites and acrylics with their different applications/functions. For more information please check our website and/or contact us.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 42 in chlorobenzene:

0.1 hr	135°C (275°F)
1 hr	114°C (237°F)
10 hr	94°C (201°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E_a	140.78 kJ/mole
A	1.94E+15 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT	55°C (131°F)
Method	The Heat Accumulation Storage Test is a recognized test for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

Ts Max.	25°C (77°F)
Note	When stored under these recommended storage conditions, Perodox 42 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg. Perodox 42 is classified as Organic peroxide type D; liquid, Division 5.2; UN 3105.

Major decomposition products

Carbon dioxide, Methane, tert-Butanol, Acetone, 2-tert-Butyloxy-2,4,4-trimethylpentane

Perodox 101

CAS No.

78-63-7

TSCA Status

listed on inventory

EINECS/ELINCS No.

201-128-1

Active oxygen

≥ 10.14 %

Appearance

Clear liquid

Assay

≥ 92.0 %

Color

≤ 50 Pt-Co / APHA


Applications

Perodox 101 can be used for the market segments: polymer production, polymer crosslinking, acrylics production and polymer recycling with their different applications/functions. For more information please check our website and/or contact us.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 101 in chlorobenzene:

0.1 hr	at 156°C (313°F)
1 hr	at 134°C (273°F)
10 hr	at 115°C (239°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
Ea	155.49 kJ/mole
A	1.68E+16 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

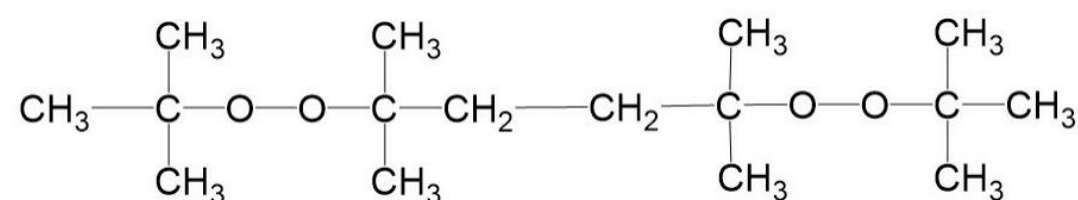

2,5-Dimethyl-2,5-di(tert-butylperoxy) hexane

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 80°C (176°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

T_s Max. 40°C (104°F) and

T_s Min. 10°C (50°F)

Note When stored under these recommended storage conditions, Perodox 101 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox 101 is classified as Organic peroxide type C; liquid, Division 5.2; UN 3103.

Major decomposition products

Acetone, Methane, tert-Amyl alcohol, tert-Butanol, Ethane

Perodox D24

CAS No.

133-14-2

TSCA Status

listed on inventory

EINECS/ELINCS No.

205-094-9

Molecular weight

380.0

Active oxygen content peroxide

4.21%

Appearance


Off-white homogeneous paste

Assay

49.0-51.0 %

Concentration

2.06-2.15%

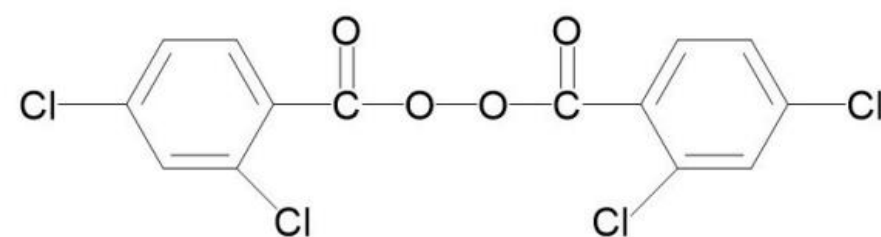

Di(2,4-dichlorobenzoyl) peroxide

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (Ts max.) for each organic peroxide product.

Ts Max. 30°C (86°F)

Ts Min. 10°C (50°F)

Note When stored under these recommended storage conditions, Perodox D24 will remain within the Do Sender Chem specifications for a period of at least 6 months after delivery.

Packaging and transport

20 kg.

Perodox D24 is classified as Organic peroxide type C; solid, Division 5.2; UN 3104.

Major decomposition products

Carbon dioxide, 1,3-Dichlorobenzene, 2,4-Dichlorobenzoic acid, Traces of 2,2',4,4'-tetrachlorobiphenyl

Applications

Perodox D24 is a monofunctional peroxide which is used for the crosslinking of silicone rubber. Safe processing temperature: 75°C (rheometer ts2 > 20 min.).

Typical crosslinking temperature: 90°C (rheometer t90 about 12 min.).

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 60°C (140°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Perodox 127

CAS No.

4511-39-1

TSCA Status

listed on inventory

EINECS/ELINCS No.


224-831-5

Molecular weight

208.3

Active oxygen content peroxide

7.68%

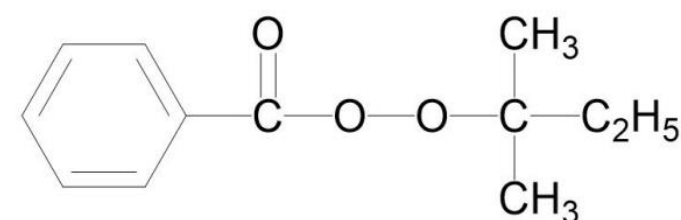

Tert-Amyl peroxybenzoate

Applications

Polymerization of styrene Perodox 127 may be used for the (co)polymerization of styrene in the temperature range of 100-135°C. In practice, combinations of two or more peroxides with diverging activities are used to reduce the residual monomer content in the final polymer and to increase reactor efficiency. During polymerization, the temperature is increased incrementally to ensure that the temperature necessary to attain the optimum properties for each peroxide is reached. In this respect, Perodox 127 is often used with more active initiators, such as dibenzoyl peroxide (Perodox L75) or tert-butyl peroxy-2-ethylhexanoate (Perodox 21). In a mass process Perodox 127 may be used to increase the rate of polymerization.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 127 in chlorobenzene:

0.1 hr	at 139°C (282°F)
1 hr	at 118°C (244°F)
10 hr	at 99°C (210°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
Ea	147.02 kJ/mole
A	8.38E+15 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 60°C (140°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

T_s Max. 20°C (68°F)

Note When stored under these recommended storage conditions, Perodox 127 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox 127 is classified as Organic peroxide type C; liquid; Division 5. 2; UN 3103.

Major decomposition products

Carbon dioxide, Benzene, Benzoic acid, tert-Amyl alcohol, Acetone, Ethane

Perodox F50

CAS No.

107-71-1

TSCA Status

listed on inventory

EINECS/ELINCS No.


203-514-5

Molecular weight

132.2

Active oxygen content peroxide

12.11%

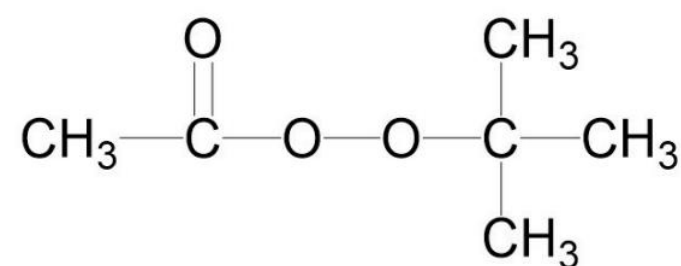

tert-Butyl peroxyacetate, 50% solution

Applications

Perodox F50 can be used as initiator for the solution (co)polymerization of acrylates and methacrylates in the temperature range of 100-170°C, amongst others for the manufacture of coatings. Perodox F50 can also be applied as an initiator for the bulk and suspension (co)polymerization of acrylates and methacrylates.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox F50 in chlorobenzene:

0.1 hr	at 139°C (282°F)
1 hr	at 119°C (246°F)
10 hr	at 100°C (212°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
Ea	149.36 kJ/mole
A	1.57E+16 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 70°C (158°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

T_s Max. 10°C (50°F)

T_s Min. -15°C (5°F) to prevent phase separation

Note When stored under these recommended storage conditions, Perodox F50 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox F50 is classified as Organic peroxide type C; liquid, Division 5. 2; UN 3103

Major decomposition products

Carbon dioxide, Acetone, Methane, tert-Butanol,

Perodox 133

CAS No.

690-83-5

TSCA Status

listed on inventory

EINECS/ELINCS No.


211-715-7

Molecular weight

146.2

Active oxygen content peroxide

6.48%

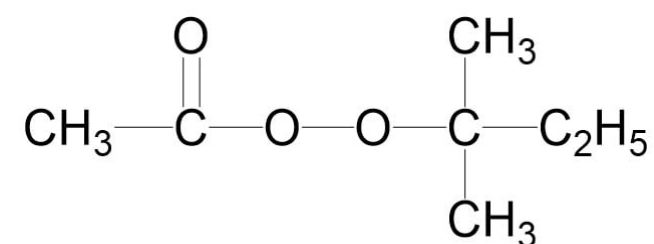

Tert-Amyl peroxyacetate

Applications

Perodox 133 can be applied in the solution and non-aqueous dispersion polymerization and methacrylates for the manufacture of coatings. In solution polymerization, Perodox 133 is typically applied in combination with another initiator such as dibenzoyl peroxide (Perodox L), tert-Butyl peroxy-2-ethylhexanoate (Perodox 21), or Di-tert-butyl peroxide (Perodox B).

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 133 in chlorobenzene:

0.1 hr	at 134°C (273.2°F)
1 hr	at 114°C (237.2°F)
10 hr	at 96°C (204.8°F)

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 60°C (140°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

T_s Max. 30°C (86°F)

Note When stored under these recommended storage conditions, Perodox 133 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox 133 is classified as Organic peroxide type D, liquid, Division 5. 2; UN 3105

Major decomposition products

Tert-butanol, acetic acid, di-tert-butyl ether, methane, ethane, etc.

Perodox 121

CAS No.

686-31-7

TSCA Status

listed on inventory

EINECS/ELINCS No.

211-687-3

Molecular weight

230.3

Active oxygen content peroxide

6.6%-6.95%

Applications


Perodox 121 can be used to initiate the (co)polymerization of acrylates and methacrylates in the temperature range between 70°C and 120°C.

Perodox 121 can be applied in suspension as well as in solvent and bulk polymerization. Perodox 121 can also be used for the copolymerization of styrene and acrylonitrile and for vinyl acetate based copolymers.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 121 in chlorobenzene:

0.1 hr	at 126°C (258.8 °F)
1 hr	at 92°C (197.6 °F)
10 hr	at 75°C (167 °F)

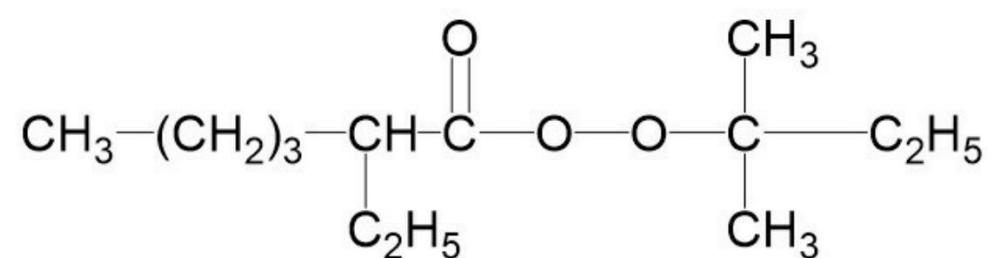

tert-Amyl peroxy-2-ethylhexanoate

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 35°C

Emergency temperature (T_e) 25°C

Control temperature (T_c) 20°C

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

T_s Max. 5°C

Note When stored under these recommended storage conditions, Perodox 121 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox 121 is classified as Organic peroxide type D; liquid, temperature controlled; Division 5. 2; UN 3115; PG II

Major decomposition products

Carbon dioxide, Methane, tert-Amyl alcohol, Heptane, Ethane, Acetone,

Perodox DA

CAS No.

10508-09-5

TSCA Status

listed on inventory

EINECS/ELINCS No.

234-042-8

Molecular weight

174.3

Active oxygen content peroxide

8.81%


Applications

Perodox DA is used as an initiator (radical source) in the polymerisation of monomers, like e.g. ethylene, styrene, and(meth)acrylates.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox DA in chlorobenzene:

0.1 hr	at 184°C (363.2 °F)
1 hr	at 143°C (289.4 °F)
10 hr	at 123°C (253.4 °F)

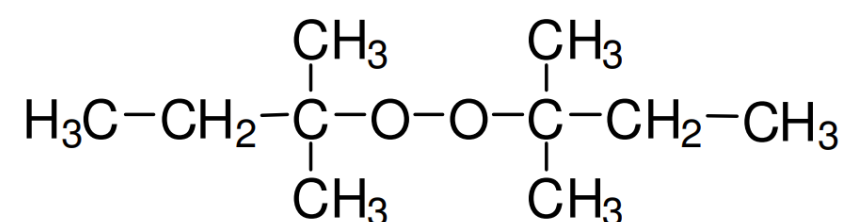

Di-tert-amyl peroxide

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 80°C

Emergency temperature (T_e) 70°C

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

T_s Max. 30°C

Note When stored under these recommended storage conditions, Perodox DA will remain within the Do Sender Chem specifications for a period of at least 6 months after delivery.

Packaging and transport

20 kg.

Perodox DA is classified as Organic Peroxide Type E, liquid, Division 5. 2; UN 3107; PG II

Major decomposition products

Carbon dioxide, Methane, tert-Amyl alcohol, Heptane, Ethane, Acetone,

Perodox 22

CAS No.

3006-86-8

TSCA Status

listed on inventory

EINECS/ELINCS No.

221-111-2

Molecular weight

260.4

Active oxygen content peroxide

10.58%


Applications

Perodox 22 is an initiator for (co)polymerization of ethylene, styrene and acrylonitrile.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 22 in chlorobenzene:

0.1 hr	at 134°C (273°F)
1 hr	at 113°C (235°F)
10 hr	at 94°C (201°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E_a	142.40 kJ/mole
A	$3.47E+15 \text{ s}^{-1}$
R	$8.3142 \text{ J/mole}\cdot\text{K}$
T	$(273.15 + ^\circ\text{C}) \text{ K}$

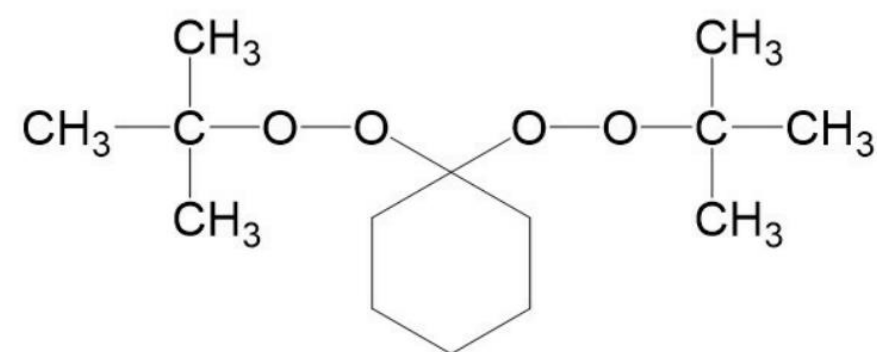

1,1-Di(tert-butylperoxy) cyclohexane

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT

60°C

Method

The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature ($T_s \text{ max.}$) for each organic peroxide product.

$T_s \text{ Max.}$

25°C

Note

When stored under these recommended storage conditions, Perodox 22 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox 22 is classified as Organic peroxide type C; liquid, Division 5. 2; UN 3103.

Major decomposition products

Carbon dioxide, tert-Butanol, Isomers of isooctane

Perodox 29

CAS No.

6731-36-8

TSCA Status

listed on inventory

EINECS/ELINCS No.


229-782-3

Molecular weight

302.5

Active oxygen content peroxide

10.58%

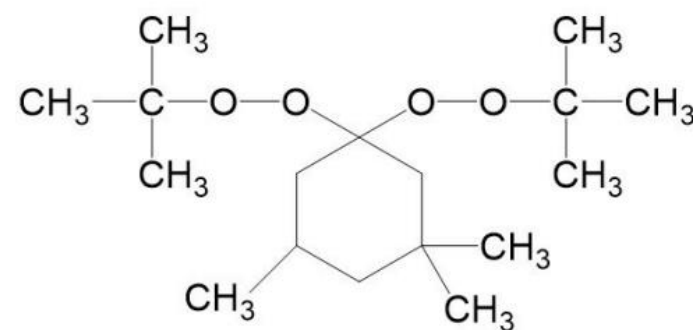

1,1-Di(tert-butylperoxy)-3,3,5-trimethylcyclohexane

Applications

Perodox 29 is an initiator (90% active ingredient in isododecane) for (co)polymerization of ethylene, styrene, acrylonitrile, (meth)acrylates and diethylene glycol bis(allyl carbonate)-based optical monomers.

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 60°C

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (Ts max.) for each organic peroxide product.

Ts Max. 25°C

Note When stored under these recommended storage conditions, Perodox 29 will remain within the Do Sender Chem specifications for a period of at least 6 months after delivery.

Packaging and transport

20 kg.

Perodox 29 is classified as Organic peroxide type C; liquid, Division 5. 2; UN 3103.

Major decomposition products

tert-Butanol, poly(3,3,5-trimethylcaprolactone), Acetone, Methane, Water, 3,3,5-Trimethylcyclohexanone

Perodox 122

CAS No.

15667-10-4

TSCA Status

listed on inventory

EINECS/ELINCS No.


239-741-1

Molecular weight

288.4

Active oxygen

8.76%-8.99%

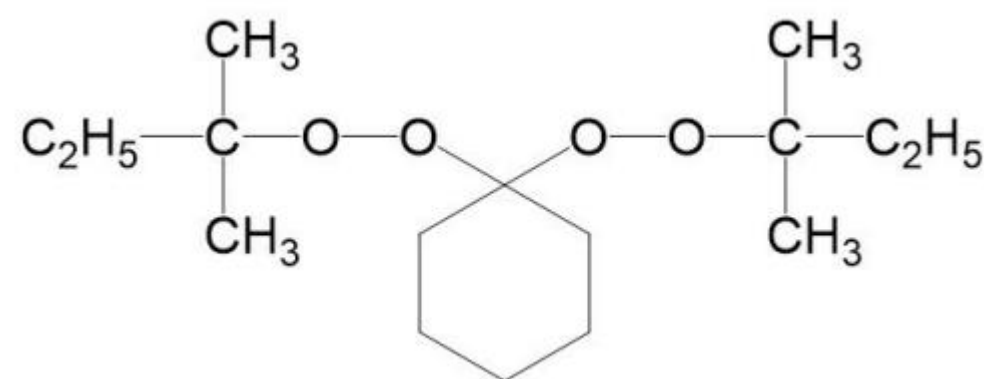

1,1-Di(tert-amylperoxy) cyclohexane

Applications

Perodox 122 is a highly efficient midrange initiator for curing unsaturated polyester and vinyl ester resins at elevated temperatures. Typical applications include prepreg, premix, BMC, TMC, SMC and pultrusion. Perodox 122 provides excellent catalyzed shelf-life in BMC and SMC formulations.

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 55°C

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (Ts max.) for each organic peroxide product.

Ts Max. 30°C

Note When stored under these recommended storage conditions, Perodox 122 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox 129 is classified as Organic peroxide type C; liquid, Division 5. 2; UN 3103.

Major decomposition products

Carbon dioxide, cyclohexanone, hexanoic acid, methyl hexanoate,

Perodox TAHP

CAS No.

3425-61-4

TSCA Status

listed on inventory

EINECS/ELINCS No.

222-321-7

Molecular weight


104.1

Active oxygen content peroxide

8.76%-8.99%

Concentration

12.30-13.06%

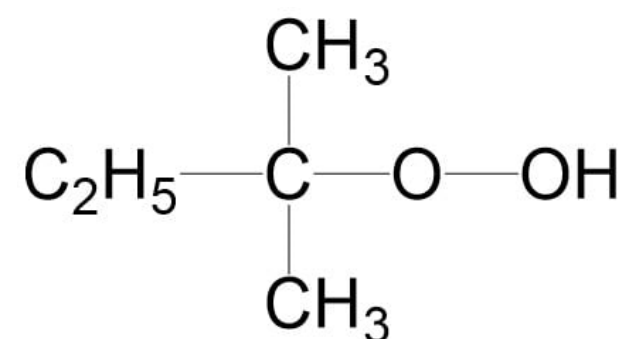

tert-Amyl hydroperoxide, 85% solution in water

Applications

Perodox TAHP can be used as initiator for the solution (co)polymerization of styrene, acrylates and methacrylates.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox TAHP in chlorobenzene:

0.1 hr	at 207°C
1 hr	at 185°C
10 hr	at 164°C
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
Ea	186.01 kJ/mole
A	3.18E+17 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT

80°C

Method

The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

Ts Max.

30°C

Ts Min.

-5°C

Note

When stored under these recommended storage conditions, Perodox TAHP will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox TAHP is classified as Organic peroxide type F; liquid, Division 5. 2; UN 3109.

Major decomposition products

Methane, tert-Amyl alcohol, Ethane, Propane

Perodox TBHP

CAS No.

75-91-2

TSCA Status

listed on inventory

EINECS/ELINCS No.


200-915-7

Molecular weight

90.1

Active oxygen content peroxide

12.71%

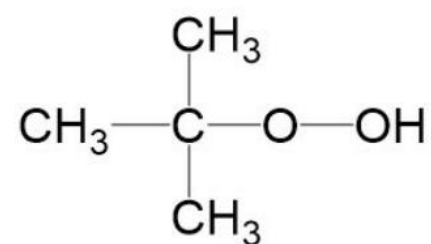

Tert-Butyl hydroperoxide

Applications

Perodox TBHP can be used as an initiator in bulk, aqueous solution and emulsion polymerization of styrene, acrylates and methacrylates. The polymerization can be initiated by radicals generated by the thermal decomposition of TBHP70 above 110°C or through a redox mechanism at low temperatures. Effective organic reducing agents are ascorbic acid and sodium formaldehyde sulfoxylate, possibly combined with heavy metal compounds such as cobalt or iron salts. Typical applications of TBHP70 include: manufacture of acrylate, vinylacetate, styrene-butadiene and other latices, curing of styrene polyester resins and use as an oxidizing agent for hydrocarbons or other chemicals.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox TBHP in chlorobenzene:

0.1 hr	at 228°C
1 hr	at 190°C
10 hr	at 153°C
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT	80°C
Method	The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

T_s Max.	30°C
T_s Min.	0°C to prevent freezing
Note	When stored according to these recommended storage conditions, Perodox TBHP will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery

Packaging and transport

20 kg.

Perodox TBHP is classified as Organic peroxide type F, liquid; Division 5.2; UN 3109

Major decomposition products

Methane, Acetone, tert-Butanol

Perodox 131

CAS No.

70833-40-8

TSCA Status

listed on inventory

EINECS/ELINCS No.

274-919-2

Molecular weight

260.4

Active oxygen content peroxide

6.14%


Applications

Perodox 131 can be used to crosslink elastomers at intermediate temperatures, a typical crosslink temperature is 150°C. Perodox 131 is recommended for highly demanding applications e.g. as crosslinker for the polyolefin elastomer copolymer (POE) film in photovoltaic devices.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 131 in chlorobenzene:

0.1 hr	at 134°C (273°F)
1 hr	at 113°C (235°F)
10 hr	at 95°C (203°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E_a	148.4 kJ/mole
A	$2.22E+16 \text{ s}^{-1}$
R	$8.3142 \text{ J/mole} \cdot \text{K}$
T	$(273.15 + ^\circ\text{C}) \text{ K}$

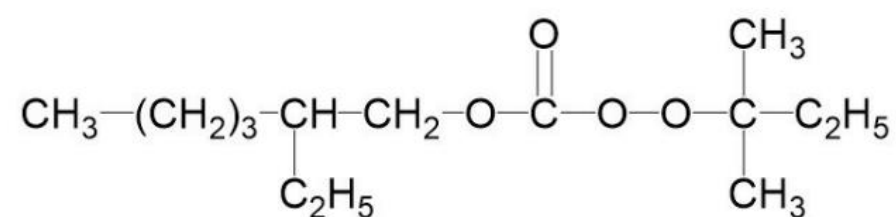

tert-Amylperoxy 2-ethylhexyl carbonate

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT	55°C (131°F)
Method	The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature ($T_s \text{ max.}$) for each organic peroxide product.

$T_s \text{ Max.}$	20°C (68°F)
Note	When stored according to these recommended storage conditions, Perodox 131 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery

Packaging and transport

20 kg.

Perodox 131 is classified as Organic peroxide type D, liquid; Division 5. 2; UN 3105.

Major decomposition products

Carbon dioxide, 2-Ethylhexanol, tert-Amyl alcohol

Perodox HMa

CAS No.


37206-20-5

TSCA Status

listed on inventory

EINECS/ELINCS No.

253-396-4

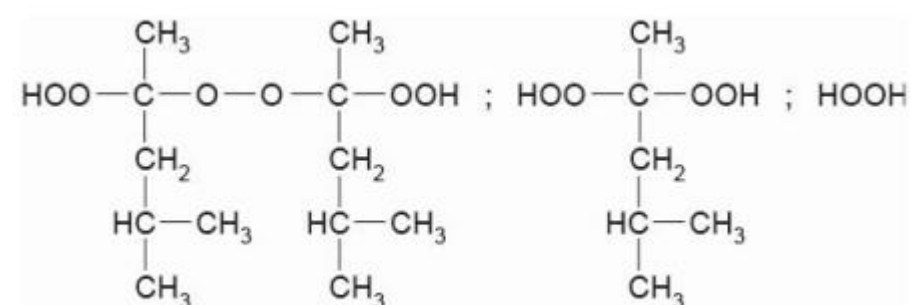

Methyl isobutyl ketone peroxide

Applications

Perodox HMa is a methyl isobutyl ketone peroxide (MIBKP) formulation for curing unsaturated polyester resins as such or in the presence of a cobalt accelerator in the temperature range of 60-150°C.

Perodox HMa is a methyl isobutyl ketone peroxide (MIBKP) formulation for the curing of unsaturated polyester resins as such or in the presence of a cobalt accelerator in the temperature range of 60-150°C. Perodox HMa can be used in combination with a cobalt accelerator (e.g. Accelerator NL-49PN) for those applications where a long gel time or production time is required at ambient temperature and a fast cure at higher temperatures e.g. 60-100°C. Application area can be: filament winding and production of flat and corrugated sheets. Perodox HMa shows also without the addition of a cobalt accelerator a high reactivity at elevated temperatures, which is demonstrated by its low activation temperature. Perodox HMa can therefore successfully be used in the temperature range of approximately 80-150°C: for the production of flat and corrugated sheets where a discoloration by the cobalt accelerator is not acceptable, as kicker for the pultrusion application in combination with a low reactive peroxide like Perodox 29 or Perodox C. The low reactive peroxide must be included in the formulation in order to achieve a complete cure.

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT	55°C
Method	The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (Ts max.) for each organic peroxide product.

Ts Max.	25°C
Note	When stored according to these recommended storage conditions, Perodox HMa will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery

Packaging and transport

20 kg.

Perodox HMa is classified as Organic peroxide type D; liquid, Division 5.2; UN 3105.

Major decomposition products

Carbon monoxide, water, mixture of aliphatic acids and ketones

Perodox 301

CAS No.

24748-23-0

TSCA Status


listed on inventory

EINECS/ELINCS No.

429-320-2

Molecular weight

264.3

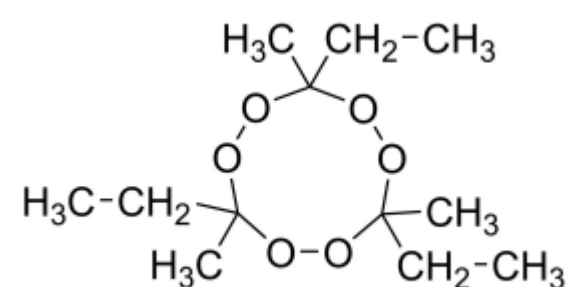

3,6,9-Triethyl-3,6,9-trimethyl-1,4,7-triperoxonane

Applications

Perodox 301 is an efficient peroxide formulation for the production of controlled rheology polypropylene (CR-PP) in an extrusion process. It also can be used for the market segments: polymer production, acrylics production and polymer recycling with their different applications/functions.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 301 in chlorobenzene:

0.1 hr	170°C (338°F)
1 hr	146°C (295°F)
10 hr	125°C (257°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E_a	150.23 kJ/mole
A	1.02E+15 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 110°C (230°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

T_s max. 40°C (104°F)

T_s min. 10°C (50°F)

Note When stored according to these recommended storage conditions, Perodox 301 will remain within the Do Sender Chem specifications for a period of at least 12 months after delivery

Packaging and transport

20 kg.

Perodox 301 is classified as Organic peroxide type D; liquid, Division 5.2; UN 3105.

Major decomposition products

Carbon dioxide, Ethane, Methane, Ethyl acetate, Methyl ethyl ketone, Methyl acetate

Perodox TBMA

CAS No.

1931-62-0

TSCA Status

listed on inventory

EINECS/ELINCS No.

217-691-1

Molecular weight


188.2

Active oxygen content peroxide

8.5%

Concentration

3.23-3.57%

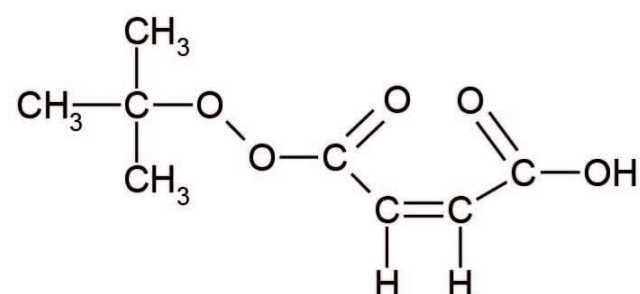

tert-Butyl monoperoxymaleate, 40%

Applications

Perodox TBMA is a 40% suspension which is used for room temperature curing of acrylic solid surface without yellow discoloration. It is used in combination with Accelerator CTAS for room temperature cure.

Perodox TBMA can be used as for the ambient temperature curing of MMA resins. Without the addition of an accelerator, the cure of the acrylate resin starts only above the activation temperature of 90°C. For the cure at ambient temperature, Perodox TBMA must be accelerated with a combination of special accelerators. Together with the Accelerators R-913 and Ca(OH)₂, a reasonable geltime is obtained with a fast cure at ambient temperatures. The most important advantage of a cure system based on Perodox TBMA is the absence of yellow discoloration and a lower residual monomer content compared to results obtained with a BPO/amine curing system.

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 50°C (122°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (Ts max.) for each organic peroxide product.

Ts max. 25°C (77°F)

Note When stored according to these recommended storage conditions, Perodox TBMA will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery

Packaging and transport

20 kg.

Perodox TBMA is classified as Organic peroxide type E; solid, Division 5.2; UN 3108; PG I.

Major decomposition products

Carbon dioxide, methane, ethane, isononanoic acid, 2-phenylpropanol-2, acetophenone, cumene, etc.

Perodox EHP

CAS No.

16111-62-9

TSCA Status

listed on inventory

EINECS/ELINCS No.

240-282-4

Molecular weight

346.5

Active oxygen content peroxide

4.62%


Applications

Perodox EHP is an initiator for the (co)polymerization of ethylene, vinyl chloride, vinylidene chloride, acrylates and methacrylates. Polymerization of ethylene: Perodox EHP is an efficient initiator for the production of Low Density Polyethylene (LDPE). It is used both for tubular and autoclave processes. In most cases a combination with other peroxides is used to ensure a broad reactivity range. Polymerization of vinyl chloride: Perodox EHP is applied as an initiator for the suspension and mass polymerization of vinyl chloride in the temperature range between 40°C and 65°C. Perodox EHP can be used alone or in combination with other peroxides, such as 1,1,3,3-Tetramethylbutyl peroxyneodecanoate (Perodox 423), Cumyl peroxyneodecanoate (Perodox 99) or Dilauroyl peroxide (LUNA), to increase reactor efficiency.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox EHP in chlorobenzene:

0.1 hr	at 83°C (181°F)
1 hr	at 64°C (147°F)
10 hr	at 47°C (117°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E_a	122.45 kJ/mole
A	$1.83E+15 \text{ s}^{-1}$
R	8.3142 J/mole·K
T	(273.15+°C) K

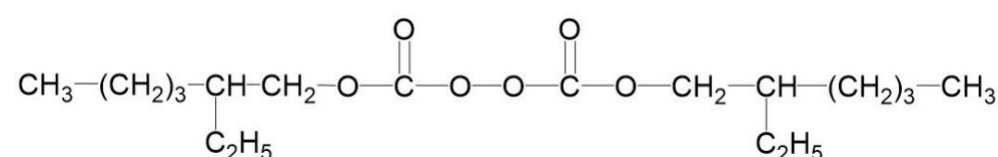

Di(2-ethylhexyl) peroxydicarbonate

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT	0°C (32°F)
Emergency temperature (T_e)	-10°C (14°F)
Control temperature (T_c)	-20°C (-4°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature ($T_s \text{ max.}$) for each organic peroxide product.

$T_s \text{ max.}$	-20°C (-4°F)
Note	When stored according to these recommended storage conditions, Perodox EHP will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery

Packaging and transport

20 kg.

Perodox EHP is classified as Organic peroxide type C; liquid, temperature controlled; Division 5.2; UN 3113.

Major decomposition products

Carbon dioxide, 2-Ethylhexanol

Perodox 16

CAS No.

15520-11-3

TSCA Status


listed on inventory

EINECS/ELINCS No.

239-557-1

Molecular weight

398.5

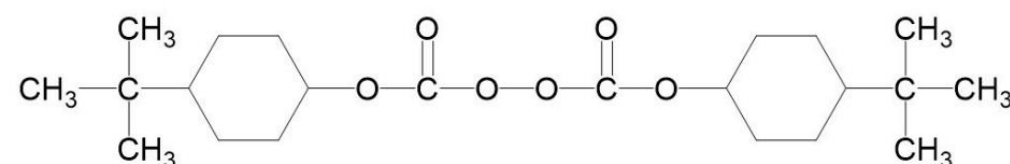

Di(4-tert-butylcyclohexyl) peroxydicarbonate

Applications

Perodox 16 is applied as an initiator for the suspension and mass polymerization of vinyl chloride in the temperature range between 40°C and 65°C. Perodox 16 can be used alone or in combination with other peroxides, such as 1,1,3,3-Tetramethylbutyl peroxyneodecanoate, Cumyl peroxyneodecanoate) or Dilauroyl peroxide (Perodox LUNA), to increase reactor efficiency

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 16 in chlorobenzene:

0.1 hr	82°C (180°F)
1 hr	64°C (147°F)
10 hr	48°C (118°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E_a	126.39 kJ/mole
A	$7.44E+15 \text{ s}^{-1}$
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 40°C

Emergency temperature (T_e) 35°C

Control temperature (T_c) 30°C

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature ($T_s \text{ max.}$) for each organic peroxide product.

$T_s \text{ max.}$ 20°C (please see note below)

Note When stored under the recommended storage conditions, Perodox 16 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery. The $T_s \text{ max.}$ of 20°C is not to be interpreted as ambient or room temperature as this differs per region and season. Perodox 16 has a high quality composition and to hold that it should be stored at below 20°C. At temperatures above 20°C the decomposition of Perodox 16 progresses fast which leads to significant loss of quality.

Packaging and transport

20 kg.

Perodox 16 is classified as Organic peroxide type C; solid, temperature controlled; Division 5. 2; UN 3114.

Major decomposition products

Carbon dioxide, 4-tert-Butyl-cyclohexanol

Perodox 36

CAS No.

3851-87-4

TSCA Status

listed on inventory

EINECS/ELINCS No.


223-356-0

Molecular weight

314.5

Active oxygen content peroxide

5.09%

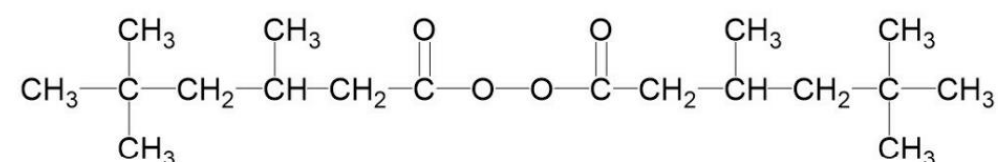

Di(3,5,5-trimethylhexanoyl) peroxide, 75%

Applications

Perodox 36 is an efficient initiator (75% active ingredient in odorless mineral spirits) for (co)polymerization of ethylene, vinyl chloride, vinylidene chloride acrylates and methacrylates. Polymerization of ethylene: Perodox 36 is an efficient initiator for the ethylene polymerization under high pressure in both autoclave and tubular processes. To obtain a wide spectrum of polymerization temperatures, combinations with other peroxides are applied in practice. Polymerization of vinyl chloride: Perodox 36 can also be applied as an initiator for the suspension polymerization of vinyl chloride in the temperature range 50-70°C.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 36 in chlorobenzene:

0.1 hr	at 96°C (205°F)
1 hr	at 77°C (171°F)
10 hr	at 59°C (138°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E_a	128.34 kJ/mole
A	$2.84E+15 \text{ s}^{-1}$
R	8.3142 J/mole·K
T	$(273.15 + ^\circ\text{C}) \text{ K}$

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 20°C (68°F)

Emergency temperature (T_e) 10°C (50°F)

Control temperature (T_c) 0°C (32°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature ($T_s \text{ max.}$) for each organic peroxide product.

$T_s \text{ max.}$ 0°C

$T_s \text{ min.}$ -25°C to prevent crystallization

Note When stored according to these recommended storage conditions, Perodox 36 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox 36 is classified as Organic peroxide type D; liquid, temperature controlled, Division 5. 2; UN 3115.

Major decomposition products

Carbon dioxide, 2,2,4,7,9,9-Hexamethyldecane, 2,4,4-Trimethylpentane

Perodox 125

CAS No.

29240-17-3

TSCA Status

listed on inventory

EINECS/ELINCS No.

64741-65-7

Molecular weight

188.3

Active oxygen content peroxide

8.5%


Applications

Perodox 75 is an initiator (75% active ingredient in isododecane) for (co)polymerization of ethylene, styrene, vinyl chloride, vinylidene chloride and polyols. Polymerization of ethylene: Perodox 75 is an efficient initiator for the ethylene polymerization under high pressure in both autoclave and tubular processes. To obtain a wide spectrum of polymerization temperatures, combinations with other peroxides are applied in practice. Polymerization of vinyl chloride: Perodox 75 can be applied as an initiator for the suspension polymerization of vinyl chloride in the temperature range between 50°C and 65°C. Perodox 125 may be used in combination with other initiators to increase reactor efficiency.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 125 in chlorobenzene:

0.1 hr	at 91°C (196°F)
1 hr	at 72°C (162°F)
10 hr	at 54°C (129°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E _a	127.76 kJ/mole
A	4.12E+15 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

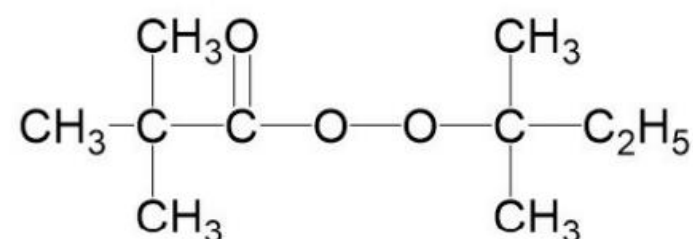

tert-Amyl peroxyvalerate, 75%

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 25°C (77°F)

Emergency temperature (T_e) 15°C (59°F)

Control temperature (T_c) 10°C (50°F)

Method The Heat Accumulation Storage Test is a

recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_{s max}) for each organic peroxide product.

T_{s Max}. -10°C (14°F)

T_{s Min}. -30°C (-22°F) to prevent crystallization

Note When stored according to these recommended storage conditions, Perodox 125 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox 125 is classified as Organic peroxide type C; liquid, temperature controlled, Division 5.2; UN 3113.

Major decomposition products

Carbon dioxide, Ethane, Isobutane, Isobutene, Acetone, Methyl ethyl ketone, tert-Amyl alcohol

Perodox 23

CAS No.

26748-41-4

TSCA Status

listed on inventory

EINECS/ELINCS No.

247-955-1

Molecular weight

244.4

Active oxygen content peroxide

6.55%


Applications

Perodox 23 is an efficient initiator for the production of Low Density Polyethylene (LDPE). It is used both for tubular and autoclave processes. In most cases a combination with other peroxides is used to ensure a broad reactivity range. Perodox 23 is used as an initiator for the suspension polymerization of vinyl chloride in the temperature range between 40°C and 65°C. Perodox 23 can be used alone or in combination with other peroxides, such as 1,1,3,3-Tetramethylbutyl peroxyneodecanoate (Perodox 423), Cumyl peroxyneodecanoate (Perodox 99) or Dilauroyl peroxide (LUNA), to increase reactor efficiency.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 23 in chlorobenzene:

0.1 hr	at 84°C (183°F)
1 hr	at 64°C (147°F)
10 hr	at 46°C (115°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
Ea	115.47 kJ/mole
A	1.52E+14 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

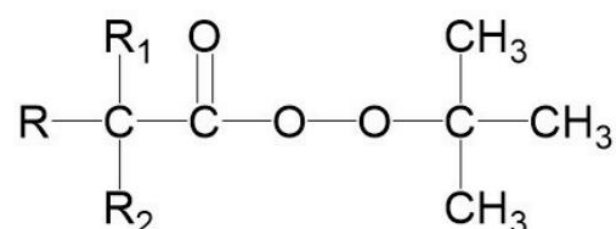

tert-Butyl peroxyneodecanoate, 75%

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 20°C (68°F)

Emergency temperature (T_e) 10°C (50°F)

Control temperature (T_c) 0°C (32°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature ($T_{s \max}$) for each organic peroxide product.

$T_{s \max}$ -10°C (14°F)

$T_{s \min}$ -20°C (-4°F) to prevent crystallization

Note When stored according to these recommended storage conditions, Perodox 23 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox 23 is classified as Organic peroxide type D; liquid, temperature controlled, Division 5. 2; UN 3115.

Major decomposition products

Carbon dioxide, tert-Butanol, Isomers of neononane

Perodox 25

CAS No.

927-07-1

TSCA Status

listed on inventory

EINECS/ELINCS No.

213-147-2

Molecular weight

174.2

Active oxygen content peroxide

9.18%

Concentration

6.89%


Applications

Perodox 25 is an initiator (75% active ingredient in in odorless mineral spirits) for (co)polymerization of acrylates and methacrylates. It can be used for the market segments: polymer production and acrylics with their different applications/functions

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 25 in chlorobenzene:

0.1 hr	at 94°C (201°F)
1 hr	at 75°C (167°F)
10 hr	at 57°C (135°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E_a	123.59 kJ/mole
A	$7.09E+14 \text{ s}^{-1}$
R	$8.3142 \text{ J/mole} \cdot \text{K}$
T	$(273.15 + ^\circ\text{C}) \text{ K}$

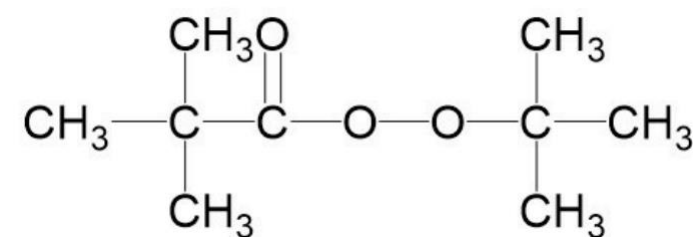

tert-Butyl peroxy pivalate, 75%

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 20°C (68°F)

Emergency temperature (T_e) 10°C (50°F)

Control temperature (T_c) 0°C (32°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature ($T_s \text{ max.}$) for each organic peroxide product.

$T_s \text{ max.}$ -5°C (23°F)

$T_s \text{ min.}$ - -15°C (5°F) to prevent crystallization

Note When stored according to these recommended storage conditions, Perodox 25 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox 25 is classified as Organic peroxide type C; liquid, temperature controlled, Division 5. 2; UN 3113.

Major decomposition products

Carbon dioxide, Isobutene, tert-Butanol, Acetone, Isobutane

Perodox 123

CAS No.

3025-88-5

TSCA Status

listed on inventory

EINECS/ELINCS No.

221-184-0

Active oxygen

4.58-4.71 %


Applications

Perodox 123 is an initiator (75% active ingredient in odorless mineral spirits) for (co)polymerization of ethylene, styrene, vinyl chloride, vinylidene chloride, acrylates and methacrylates.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 123 in chlorobenzene:

0.1 hr	at 81°C (178°F)
1 hr	at 61°C (142°F)
10 hr	at 43°C (109°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E _a	114.38 kJ/mole
A	1.47E+14 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

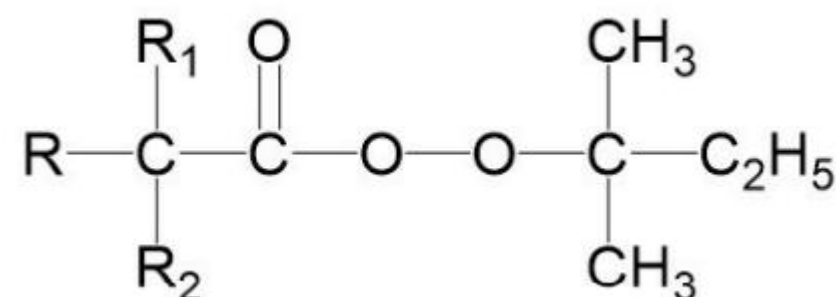

tert-Amyl peroxyneodecanoate

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 20°C (68°F)

Emergency temperature (T_e) 10°C (50°F)

Control temperature (T_c) 0°C (32°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

T_s Max. -15°C (5°F)

T_s Min. - 25°C (-13°F) to prevent crystallization

Note When stored according to these recommended storage conditions, Perodox 123 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox 123 is classified as Organic peroxide type D, liquid, temperature controlled, Division 5.2; UN 3115.

Major decomposition products

Carbon dioxide, Ethane, Isobutane, Isobutene, Acetone, Methyl ethyl ketone, tert-Amyl alcohol.

Perodox 41

CAS No.

109-13-7

TSCA Status

listed on inventory

EINECS/ELINCS No.

203-650-5

Active oxygen

4.89-5.09 %


Applications

Perodox 41 is an initiator (50% active ingredient in odorless mineral spirits) for (co)polymerization of ethylene and styrene. Perodox 41 is an efficient initiator for the ethylene polymerization under high pressure in both autoclave and tubular processes. To obtain a wide spectrum of polymerization temperatures, combinations with other peroxides are applied in practice. Depending on reaction conditions, Perodox 41 is active in the temperature range between 165°C and 250°C. Perodox 41 can be used for the polymerization of styrene in the temperature range between 85°C and 105°C. Main application is the copolymerization of styrene with acrylonitrile, acrylates and methacrylates. Perodox 41 can be used as initiator for the solution (co)polymerization of acrylates and methacrylates in the temperature range of 80-160°C, amongst others for the manufacture of coatings. Perodox 41 can also be applied as an initiator for the bulk and suspension (co)polymerization of acrylates and methacrylates.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 41 in chlorobenzene:

0.1 hr	at 118°C (244°F)
1 hr	at 98°C (208°F)
10 hr	at 79°C (174°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2) / k_d$
E _a	135.16 kJ/mole
A	2.07E+15 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

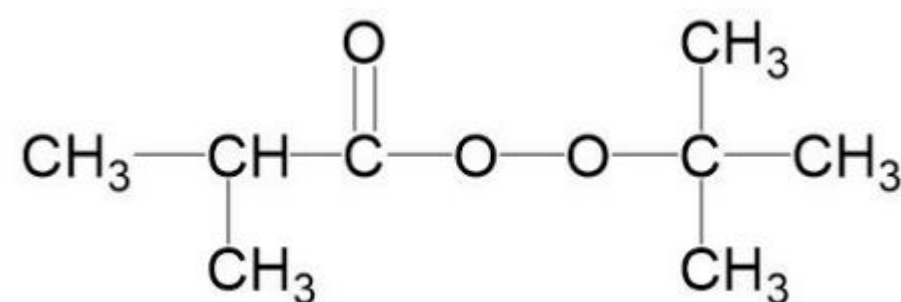

tert-Butyl peroxyisobutyrate

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 30°C (86°F)

Emergency temperature (T_e) 20°C (68°F)

Control temperature (T_c) 15°C (59°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_{s max}) for each organic peroxide product.

T_{s Max} 10°C (50°F)

Note When stored according to these recommended storage conditions, Perodox 41 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox 41 is classified as Organic peroxide type D; liquid, temperature controlled; Division 5.2; UN 3115.

Major decomposition products

Carbon dioxide, Propane, Propene, tert Butanol, 2-Isopropoxy-2-methylpropane

Perodox 141

CAS No.

13052-09-0

TSCA Status


listed on inventory

EINECS/ELINCS No.

235-935-5

Assay

≥ 92.0 %

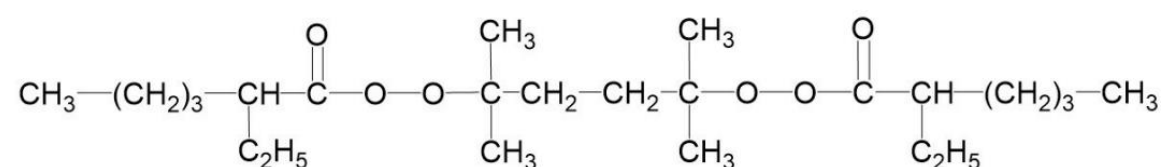

2,5-Dimethyl-2,5-di(2-ethylhexanoylperoxy) hexane

Applications

In suspension polymerization processes, Perodox 141 can be used for the polymerization of styrene at approximately 90°C. Perodox 141 has an activity comparable with Dibenzoyl peroxide (Perodox L75).

However, the bifunctional Perodox 141 gives higher molecular weights of the polymer. Applying the same molecular weights means a reduction of polymerization time

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 35°C (95°F)

Emergency temperature (T_e) 25°C (77°F)

Control temperature (T_c) 20°C (68°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

T_s Max. 15°C

Note When stored according to these recommended storage conditions, Perodox 141 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox 141 is classified as Organic peroxide type C; liquid, temperature controlled, Division 5. 2; UN 3113.

Major decomposition products

Carbon dioxide, Acetone, 2-Pentanone, Heptane, Heptenes, tert-Amyl alcohol, 2,5-Bis(1-ethylpentoxy)-2,5-dimethylhexane, 2,5-Dimethyl-2,5-hexanediol

Perodox 145

CAS No.

1068-27-5

TSCA Status

listed on inventory

EINECS/ELINCS No.

213-944-5

Molecular weight


286.4

Active oxygen content peroxide

11.17%

Concentration

9.27-9.61%

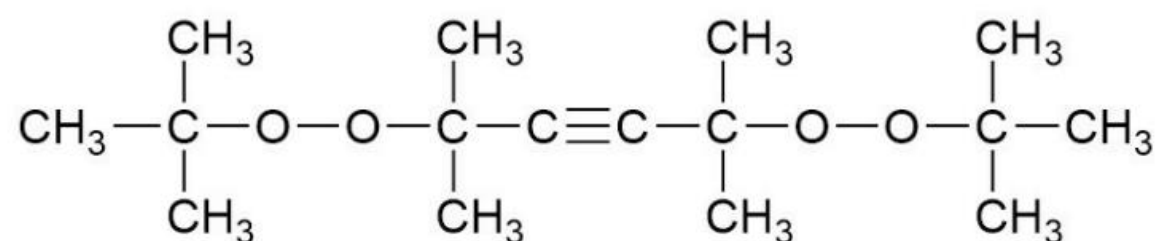

2,5-Dimethyl-2,5-di(tert-butylperoxy) hexyne-3

Applications

Perodox 145 is a bifunctional peroxide which is used for the crosslinking of natural rubber and synthetic rubbers, as well as polyolefins. Safe processing temperature: 145°C (rheometer ts2 > 20 min.). Typical crosslinking temperature: 185°C (rheometer t90 about 12 min.).

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 80°C

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (Ts max.) for each organic peroxide product.

Ts max. 30°C (86°F)

Ts min. 10°C (50°F)

Note When stored according to these recommended storage conditions, Perodox 145 will remain within the Do Sender Chem specifications for a period of at least 6 months after delivery.

Packaging and transport

20 kg.

Perodox 145 is classified as Organic peroxide type C; liquid, Division 5. 2; UN 3103.

Major decomposition products

Methane, 2,5-Dimethyl-3-hexyn-2,5-diol, Acetone, tert-Butanol

Perodox D

CAS No.

2167-23-9

TSCA Status


listed on inventory

EINECS/ELINCS No.

218-507-2

Molecular weight

234.3

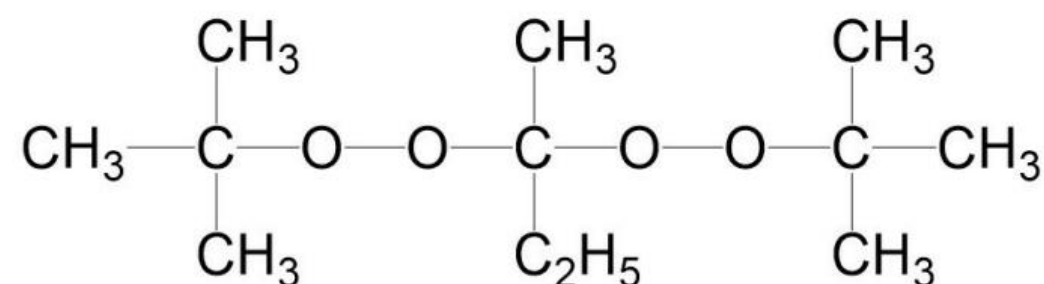

2,2-Di(tert-butylperoxy) butane

Applications

Perodox D is an initiator (50% active ingredient in mineral oil) for (co)polymerization of styrene, acrylonitrile, acrylates and methacrylates. Polymerization of styrene Perodox D can be used for the suspension polymerization and copolymerization of styrene in the temperature range between 90°C and 130°C. During polymerization the temperature is increased in steps. A comparison is made between thermally and Perodox D initiated (0.08 mmole/100 g styrene) polymerization of styrene in a mass process, applying a typical temperature scheme (110-140-180°C).

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox D in chlorobenzene:

0.1 hr	at 136°C
1 hr	at 116°C
10 hr	at 98°C
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E_a	154.08 kJ/mole
A	9.30E+16 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT

80°C

Method

The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

Note

When stored according to these recommended storage conditions, Perodox D will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox D is classified as Organic peroxide type C; liquid, Division 5.2; UN 3103.

Major decomposition products

Methane, Ethane, Acetone, tert-Butanol, Carbon dioxide, 2-Methoxy-2-methylpropane

Perodox 26

CAS No.

53220-22-7

TSCA Status


listed on inventory

EINECS/ELINCS No.

258-436-4

Molecular weight

514.8

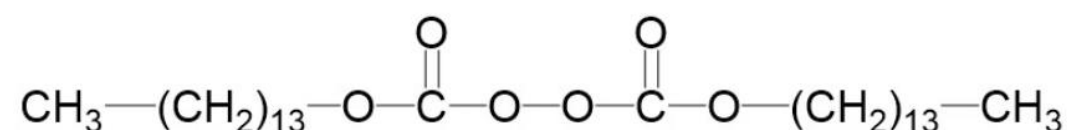

Dimyristyl peroxydicarbonate

Applications

Perodox 26 is an initiator for (co)polymerization of vinyl chloride, vinylidene chloride and (meth)acrylates. Perodox 26 is applied as an initiator for the suspension and mass polymerization of vinyl chloride in the temperature range of 40-65°C. Light yellow transparent antifouling agent particularly suited for protection of internal walls of reactors used for suspension polymerization of PVC.

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 35°C (95°F)

Emergency temperature (T_e) 25°C (77°F)

Control temperature (T_c) 20°C (68°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

T_s max. 15°C (59°F)

Note When stored according to these recommended storage conditions, Perodox 26 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox 26 is classified as Organic peroxide type D; solid, temperature controlled, Division 5. 2; UN 3116.

Major decomposition products

Carbon dioxide, Tetradecanol

Perodox 24

CAS No.

26322-14-5

TSCA Status

listed on inventory

EINECS/ELINCS No.

247-611-0

Molecular weight

570.9

Active oxygen content peroxide

2.80%

Concentration

2.52-2.61%


Applications

Perodox 24 is an initiator for (co)polymerization of vinyl chloride, vinylidene chloride, acrylates and methacrylates. Used to increase melt strength of polypropylene to make high melt strength polypropylene (HMS-PP) by reactive extrusion process.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 24 in chlorobenzene:

0.1 hr	at 84°C (183°F)
1 hr	at 65°C (149°F)
10 hr	at 48°C (118°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E_a	124.30 kJ/mole
A	$3.02E+15 \text{ s}^{-1}$
R	8.3142 J/mole·K
T	(273.15+°C) K

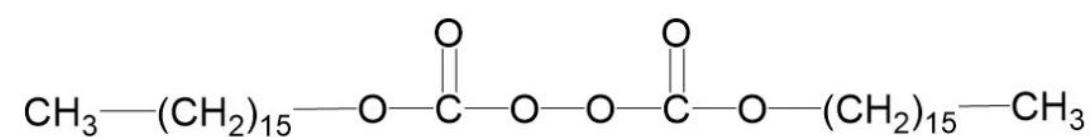

Dicetyl peroxydicarbonate

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 40°C (104°F)

Emergency temperature (T_e) 35°C (95°F)

Control temperature (T_c) 30°C (86°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature ($T_s \text{ max.}$) for each organic peroxide product.

$T_s \text{ Max.}$ 20°C (68°F)

Note When stored according to these recommended storage conditions, Perodox 24 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox 24L is classified as Organic peroxide type F; solid, temperature controlled, Division 5. 2; UN 3120.

Major decomposition products

Carbon dioxide, Hexadecanol

Perodox BPIC-C75

CAS No.

2372-21-6

TSCA Status

listed on inventory

EINECS/ELINCS No.


219-143-7

Molecular weight

176.2

Active oxygen content peroxide

9.1%

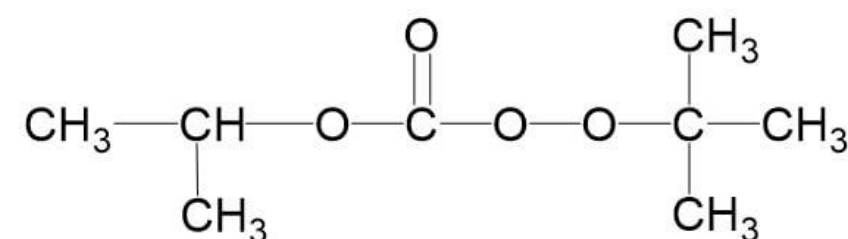

Tert-Butylperoxy isopropyl carbonate,
75% solution in odorless mineral spirits

Applications

Perodox BPIC-C75 can be used as initiator for the solution (co)polymerization of acrylates and methacrylates in the temperature range of 100-170°C, amongst others for the manufacture of coatings. Perodox BPIC-C75 can also be applied as an initiator for the bulk and suspension (co)polymerization of acrylates and methacrylates.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox BPIC-C75 in chlorobenzene:

0.1 hr	at 137°C (279°F)
1 hr	at 117°C (243°F)
10 hr	at 98°C (208°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
Ea	150.15 kJ/mole
A	2.49E+16 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 70°C

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

T_s Max. 25°C (77°F)

T_s Min. -20°C (-4°F) to prevent crystallization

Note When stored according to these recommended storage conditions, Perodox BPIC-C75 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox BPIC-C75 is classified as Organic peroxide type C; liquid, Division 5. 2; UN 3103.

Major decomposition products

Carbon dioxide, Methane, Acetone, tert-Butanol, Isopropanol

Perodox 44B

CAS No.


37187-22-7 (for EU:13784-51-5)

TSCA Status

listed on inventory

EINECS/ELINCS No.

253-384-9 (for EU: 237-438-9)

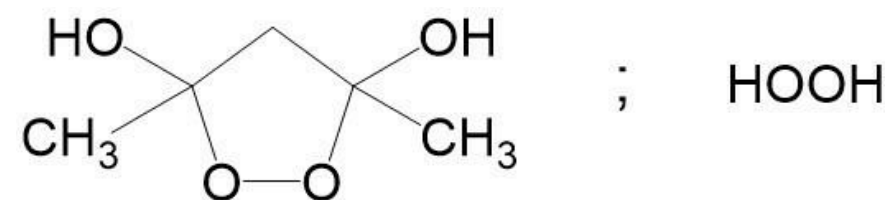

Acetyl acetone peroxide, in solvent mixture

Applications

Perodox 44B is an acetylacetone peroxide formulation for fast curing of unsaturated polyester resins in the presence of a cobalt accelerator at room and elevated temperatures, including a VR system. Perodox 44B is an acetyl acetone peroxide formulation for the curing of unsaturated polyester resins in the presence of a cobalt accelerator at room and elevated temperatures. With the curing system Perodox 44B/cobalt accelerator a much faster speed of cure may be achieved than with curing systems based on a MEKP plus cobalt accelerator, at room and elevated temperatures. Normally the gel times with Perodox 44B are comparable to those with Perodox MEKP-50.

Perodox 44B is particularly suitable in those applications where a fast mold-turnover is required, e.g. for the cold press molding or resin injection molding techniques. The system Perodox 44B/cobalt accelerator will give a higher peak exotherm than a standard MEKP/cobalt accelerator system. Due to this fact, it is recommendable to avoid the production of too thick laminates in one operation. At low temperatures a reasonable speed of cure is still obtained when Perodox 44B is used in combination with large amounts of cobalt accelerator possibly in combination with N,N Dimethylaniline as promotor.

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 60°C

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (Ts max.) for each organic peroxide product.

Ts Max. 25°C

Ts Min. -10°C

Note When stored according to these recommended storage conditions, Perodox 24 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox 44B land and sea transport is classified as Organic peroxide type E; liquid, Division 5.2; UN 3107. Air transport is classified as Organic peroxide type D; liquid, Division 5.2; UN 3105.

Major decomposition products

Carbon dioxide, acetyl acetone, mixture of aliphatic acids, water

Perodox A

CAS No.

75-91-2

TSCA Status

listed on inventory

EINECS/ELINCS No.


219-143-7

Molecular weight

90.1

Active oxygen content peroxide

17.76%

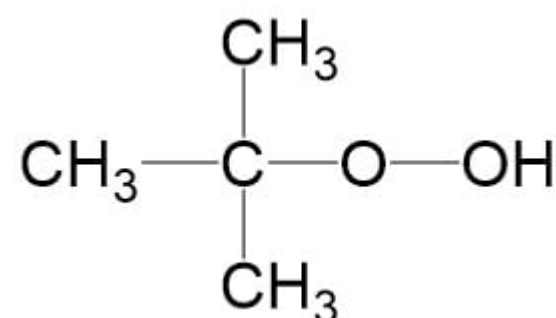

tert-Butyl hydroperoxide, 70% solution in water

Applications

Perodox A-W70 can be used as an initiator in bulk, aqueous solution and emulsion polymerization of styrene, acrylates and methacrylates. The polymerization can be initiated by radicals generated by the thermal decomposition of Perodox A-W70 above 110°C or through a redox mechanism at low temperatures. Effective organic reducing agents are ascorbic acid and sodium formaldehyde sulfoxylate, possibly combined with heavy metal compounds such as cobalt or iron salts. Typical applications of Perodox A-W70 include: manufacture of acrylate, vinylacetate, styrene-butadiene and other latices, curing of styrenepolyester resins and use as an oxidizing agent for hydrocarbons or other chemicals.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox A in chlorobenzene:

0.1 hr	at 207°C
1 hr	at 185°C
10 hr	at 164°C
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
Ea	186.01 kJ/mole
A	$3.18E+17 \text{ s}^{-1}$
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 80°C

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature ($T_s \text{ max.}$) for each organic peroxide product.

$T_s \text{ Max.}$ 35°C

$T_s \text{ Min.}$ 0°C to prevent freezing

Note When stored according to these recommended storage conditions, Perodox A will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox A-W70 is classified as Organic peroxide type F, liquid; Division 5. 2; UN 3109.

Major decomposition products

Methane, Acetone, tert-Butanol

Perodox TAHP

CAS No.

3425-61-4

TSCA Status

listed on inventory

EINECS/ELINCS No.


219-143-7

Molecular weight

104.1

Active oxygen content peroxide

15.36%

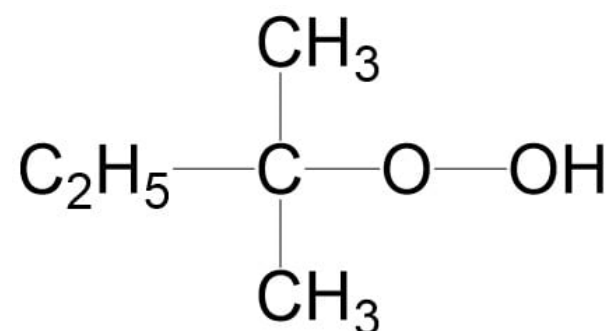

tert-Butyl hydroperoxide, 70% solution in water

Applications

Perodox TAHP-W85 is an initiator (85% active ingredient in water) for (co)polymerization of acrylates and methacrylates.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox TAHP in chlorobenzene:

0.1 hr	at 228°C
1 hr	at 190°C
10 hr	at 153°C
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 80°C

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature ($T_s \text{ max.}$) for each organic peroxide product.

$T_s \text{ Max.}$ 35°C

$T_s \text{ Min.}$ -5°C

Note When stored according to these recommended storage conditions, Perodox A will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox TAHP-W85 is classified as Organic peroxide type F; liquid, Division 5. 2; UN 3109.

Major decomposition products

Methane, tert-Amyl alcohol, Ethane, Propane

Perodox 17

CAS No.

995-33-5

TSCA Status

listed on inventory

EINECS/ELINCS No.


213-626-6

Molecular weight

334.5

Active oxygen content peroxide

9.57%

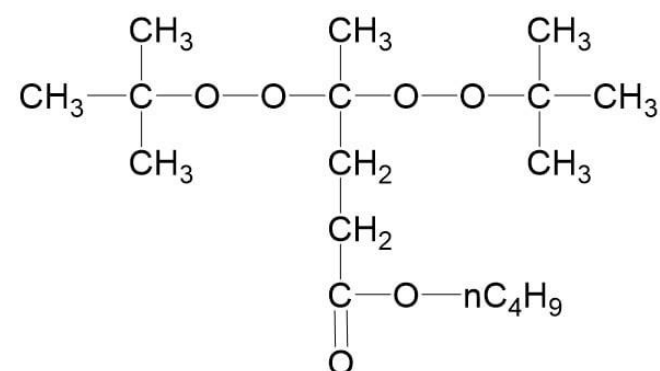

Butyl 4,4-di(tert-butylperoxy) valerate

Applications

Perodox 17 is a pure peroxide in liquid form.

Perodox 17 is a bifunctional peroxide which is used for the crosslinking of natural rubber and synthetic rubbers, as well as polyolefins. Safe processing temperature: 125°C (rheometer ts2 > 20 min.). Typical crosslinking temperature: 160°C (rheometer t90 about 12 min.)

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 60°C (140°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (Ts max.) for each organic peroxide product.

Ts Max. 30°C (86°F)

Note When stored according to these recommended storage conditions, Perodox A will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.


Perodox 17 is classified as Organic peroxide type C; liquid, Division 5. 2; UN 3103.

Major decomposition products

Methane, Carbon dioxide, Acetone, tert-Butanol, n-Butyl propionate,

Perodox 123-C75

CAS No.
68299-16-1
TSCA Status
listed on inventory
EINECS/ELINCS No.
64741-65-7

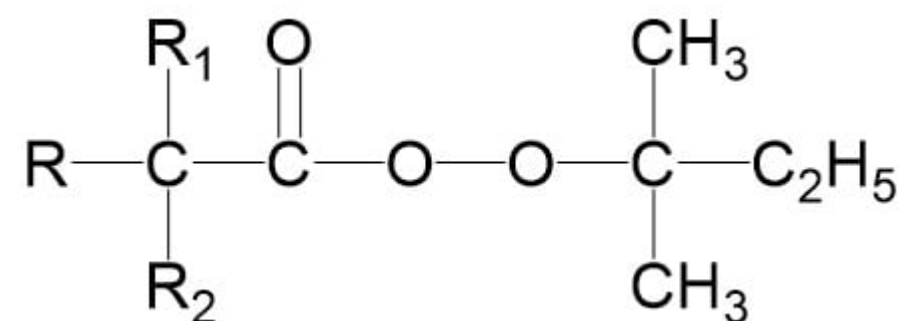

tert-Amyl peroxyneodecanoate

Applications

Perodox 123-C75 is an initiator (75% active ingredient in odorless mineral spirits) for (co)polymerization of ethylene, styrene, vinyl chloride, vinylidene chloride, acrylates and methacrylates. Perodox 123-C75 is an efficient initiator for the production of Low Density Polyethylene (LDPE). It is used both for tubular and autoclave processes. In most cases a combination with other peroxides is used to ensure a broad reactivity range.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 123-C75 in chlorobenzene:

0.1 hr	at 81°C (178°F)
1 hr	at 61°C (142°F)
10 hr	at 43°C (109°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E _a	114.38 kJ/mole
A	1.47E+14 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT	20°C (68°F)
Emergency temperature (T _e)	10°C (50°F)
Control temperature (T _c)	0°C (32°F)
Method	The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature (T_{s max.}) for each organic peroxide product.

T _{s Max.}	-15°C (5°F)
T _{s Min.}	-25°C (-13°F) to prevent crystallization
Note	When stored according to these recommended storage conditions, Perodox 123-C75 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.
Perodox 123-C75 is classified as Organic peroxide type D, liquid, temperature controlled, Division 5.2; UN 3115.

Major decomposition products

Carbon dioxide, Ethane, Isobutane, Isobutene, Acetone, Methyl ethyl ketone, tert-Amyl alcohol

Perodox TMBH-L

CAS No.

5809-08-5

TSCA Status

listed on inventory

EINECS/ELINCS No.


227-369-2

Molecular weight

146.2

Active oxygen content peroxide

10.94%

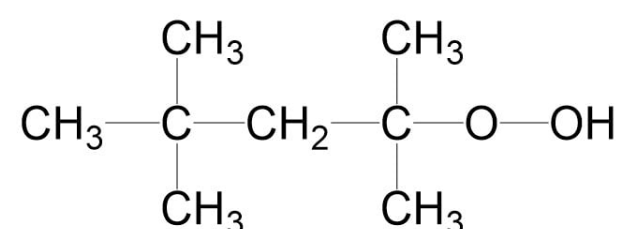

1,1,3,3-Tetramethylbutyl hydroperoxide,
90% solution in solvent mixture

Applications

Perodox TMBH-L may be used for the bulk and emulsion polymerization of vinyl monomers such as styrene, butadiene, acrylonitrile, acrylates and methacrylates. Perodox TMBH-L can be activated by organic-soluble or water-soluble reducing agents and by metal compounds to accelerate polymerization and/or to reduce polymerization temperature.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox TMBH-L in chlorobenzene:

0.1 hr	180°C
1 hr	159°C
10 hr	144°C
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E_a	181.99 kJ/mole
A	$1.90E+18 \text{ s}^{-1}$
R	8.3142 J/mole·K
T	$(273.15 + ^\circ\text{C}) \text{ K}$

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT

60°C

Method

The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature ($T_s \text{ max.}$) for each organic peroxide product.

$T_s \text{ Max.}$

25°C

$T_s \text{ Min. -}$

5°C to prevent crystallization

Note

When stored according to these recommended storage conditions, Perodox TMBH-L will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox TMBH-L is classified as Organic peroxide type D; liquid, Division 5.2; UN 3105.

Major decomposition products

Acetone, Isobutene, 2,4,4-Trimethyl-1-pentene

Perodox 421

CAS No.

22288-43-3

TSCA Status

listed on inventory

EINECS/ELINCS No.


244-894-2

Molecular weight

272.4

Active oxygen content peroxide

5.87%

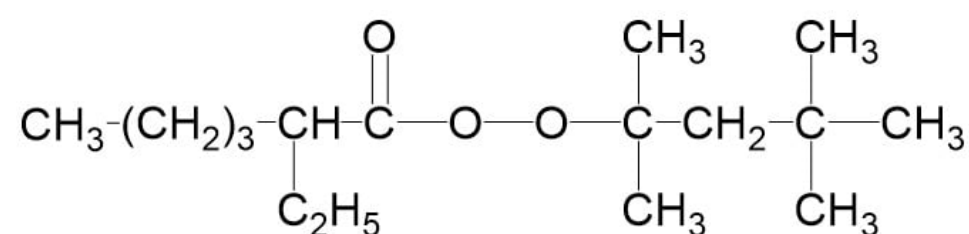

1,1,3,3-Tetramethylbutyl peroxy-2-ethylhexanoate

Applications

Perodox 421 can be used to initiate the (co)polymerization of acrylates and methacrylates in the temperature range between 70°C and 120°C.

Perodox 421 can be applied in suspension as well as in solvent and bulk polymerization.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox 421 in chlorobenzene:

1 hr	88°C (190°F)
10 hr	69°C (156°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
Ea	123.80 kJ/mole
A	1.62E+14 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT	30°C (86°F)
Emergency temperature (T_e)	20°C (68°F)
Control temperature (T_c)	15°C (59°F)
Method	The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature ($T_{s \max}$) for each organic peroxide product.

$T_{s \max}$	5°C (41°F)
$T_{s \min}$	-20°C (-4°F) to prevent crystallization
Note	When stored according to these recommended storage conditions, Perodox 421 will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox 421 is classified as Organic peroxide type D; liquid, temperature controlled; Division 5.2; UN 3115.

Major decomposition products

Carbon dioxide, 2,2-Dimethylpropane, Acetone, Heptane, Heptanes, 2,4,4-Trimethyl-2-pentanol, 2-(1-Ethylpentoxy)-2,4,4-trimethylpentane

Perodox BC-FF

CAS No.

80-43-3

TSCA Status

listed on inventory

EINECS/ELINCS No.

201-279-3

Molecular weight


270.4

Active oxygen content peroxide

5.92%

Concentration

5.86% min.

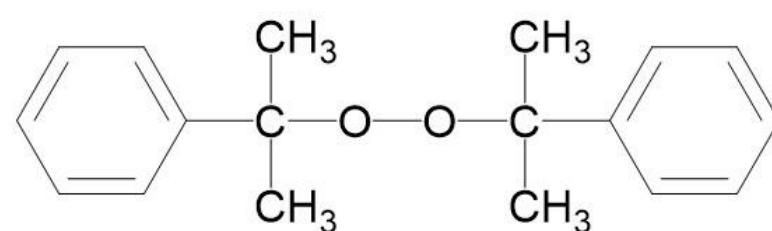

Dicumyl peroxide

Applications

Perodox BC-FF is a monofunctional peroxide which is used for the crosslinking of natural rubber and synthetic rubbers, as well as polyolefins. Rubber compounds containing Perodox BC-FF have excellent scorch safety, and under certain conditions one step mixing is possible. Safe processing temperature: 130°C (rheometer ts2 > 20 min.). Typical crosslinking temperature: 170°C (rheometer t90 about 12 min.).

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox BC-FF in chlorobenzene:

0.1 hr	at 154°C (309°F)
1 hr	at 132°C (270°F)
10 hr	at 112°C (234°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
E_a	152.67 kJ/mole
A	$9.24E+15 \text{ s}^{-1}$
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 75°C (167°F)

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature ($T_s \text{ max.}$) for each organic peroxide product.

$T_s \text{ Max.}$ 30°C (86°F)

Note When stored according to these recommended storage conditions, Perodox BC-FF will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox BC-FF is classified as Organic peroxide type F; solid, Division 5.2; UN 3110.

Major decomposition products

Methane, Acetophenone, 2-Phenylisopropanol

Perodox T

CAS No.

3457-61-2

TSCA Status

listed on inventory

EINECS/ELINCS No.

222-389-8

Molecular weight


208.3

Active oxygen content peroxide

7.68%

Concentration

7.22-7.37%

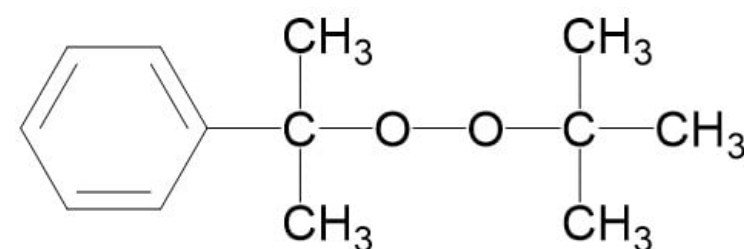

tert-Butyl cumyl peroxide

Applications

Perodox T is a monofunctional peroxide which is used for the crosslinking of natural rubber and synthetic rubbers, as well as polyolefins. Safe processing temperature: 135°C (rheometer ts2 > 20 min.). Typical crosslinking temperature: 175°C (rheometer t90 about 12 min.).

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perodox T in chlorobenzene:

0.1 hr	at 159°C (318°F)
1 hr	at 136°C (277°F)
10 hr	at 115°C (239°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
Ea	146.98 kJ/mole
A	$1.17E+15 \text{ s}^{-1}$
R	8.3142 J/mole·K
T	(273.15 + °C) K

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT 80°C

Method The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Do Sender Chem recommends a maximum storage temperature ($T_s \text{ max.}$) for each organic peroxide product.

$T_s \text{ max.}$ 40°C (104°F)

$T_s \text{ min.}$ 16°C (61°F)

Note When stored according to these recommended storage conditions, Perodox T will remain within the Do Sender Chem specifications for a period of at least 3 months after delivery.

Packaging and transport

20 kg.

Perodox T is classified as Organic peroxide type F; liquid, Division 5.2; UN 3109.

Major decomposition products

Acetone, Methane, 2-Phenylisopropanol, tert-Butanol, Acetophenone